





3001210

Adelaide Steel Cabinet w.
Rippled Glass Door
Black-Single Door

HOUSE


NORDIC

	1 x28		2 x1		3 x1		4 x1
spare:2		∅6x30mm		∅12x0.8mm	spare:1		spare:1
	5 x1		6 x1		7 x4		8 x4
spare:1				spare:2			
	9 x2		10 x2				

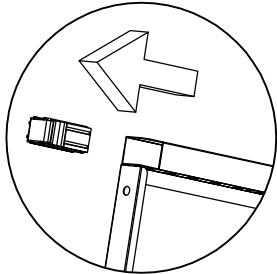



(1) - Attach (A) to (E) as below shown.

Make sure the holes are nearest to outside otherwise will affect door assembling.

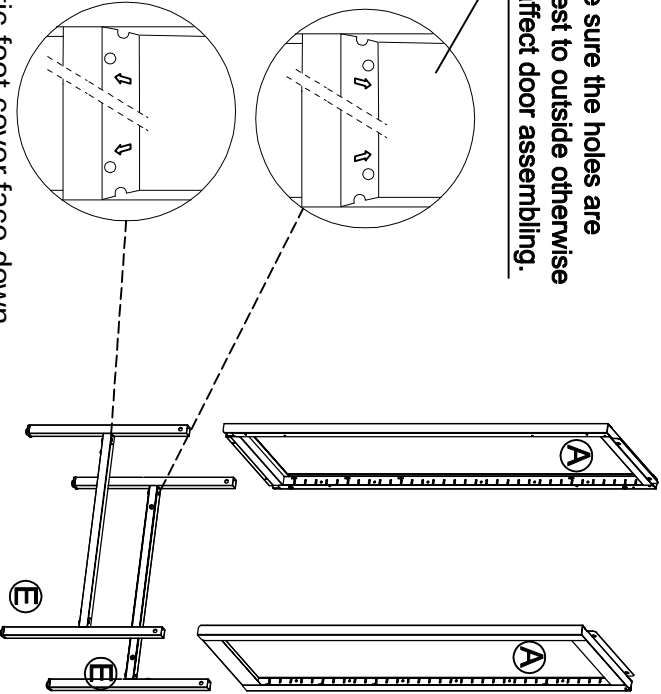



The plastic foot cover face down

(3) - Attach (B) to (A) & (E) as below shown.

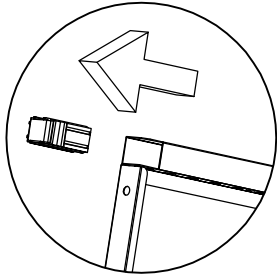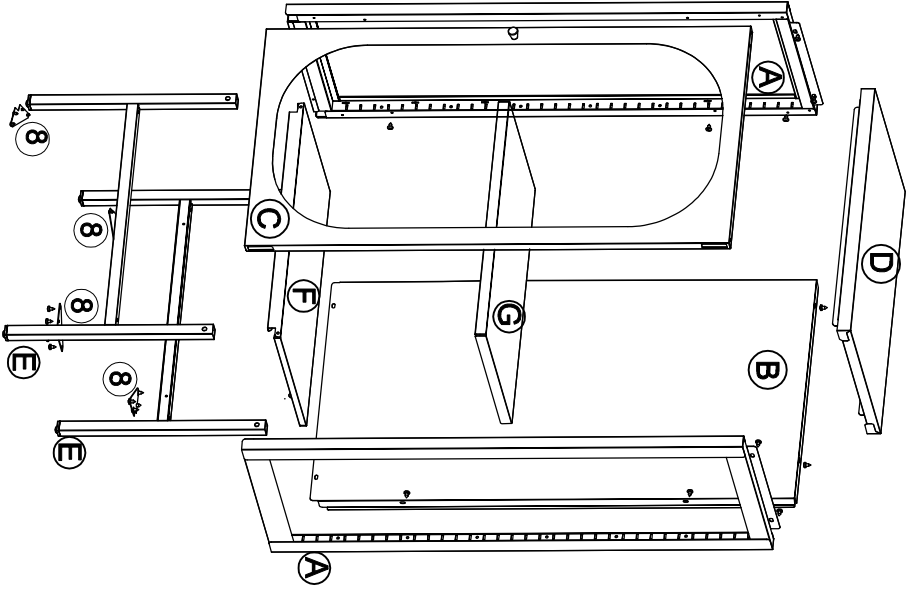


(2) - Attach ⑧ to (E) as below shown.


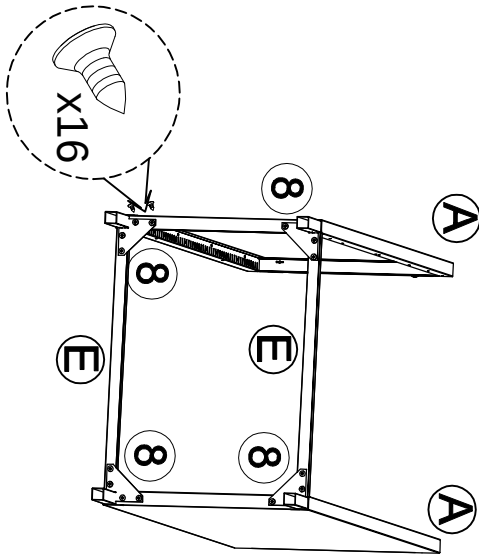


	8 x4		1 x16
---	----------------------------	---	-----------------------------



(4) - Attach (F) to (A) & (B) & (E) as below shown.

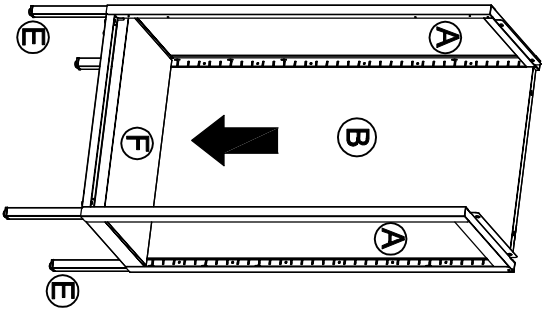






(5) - Attach (D) to (A) as below shown.

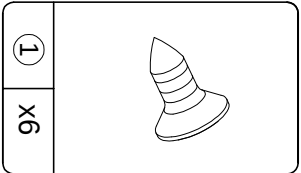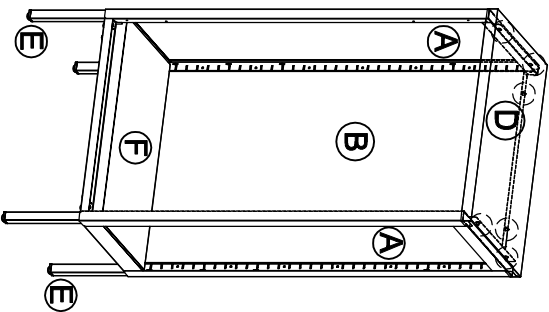


(6) - Attach (G) to pre-assembled unit as below shown.

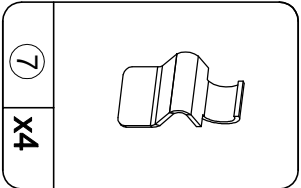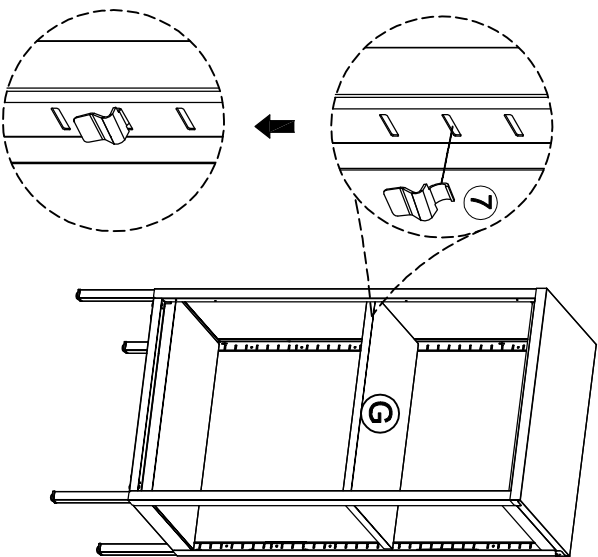


(7) - Attach (6) to (C) as below shown.

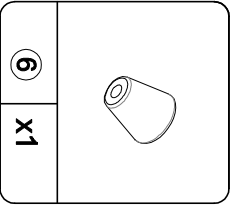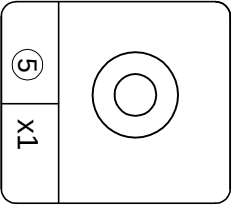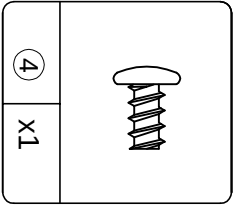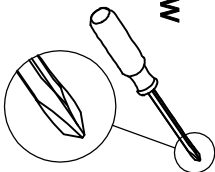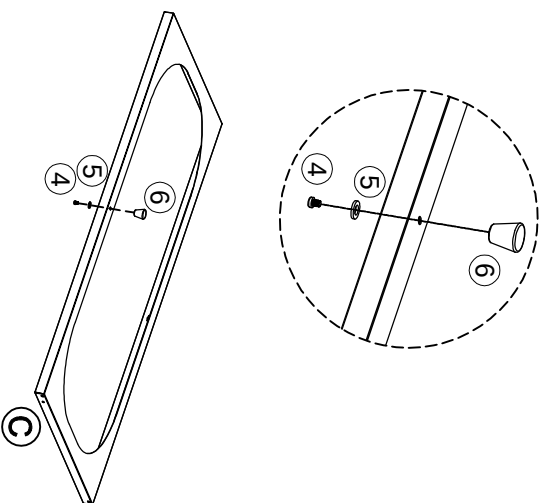

(8) -Attach (2) & (3) to pre-assembled unit as below shown.



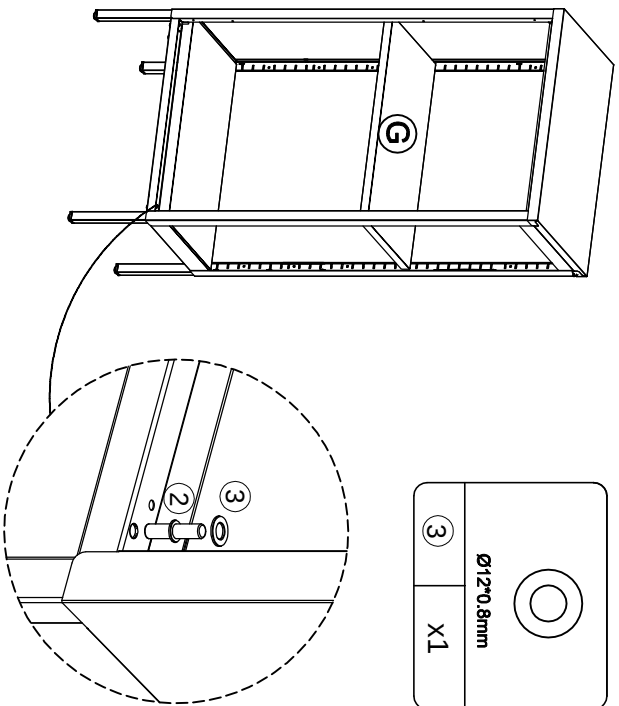


(9) - Attach (C) to pre-assembled unit as below shown.

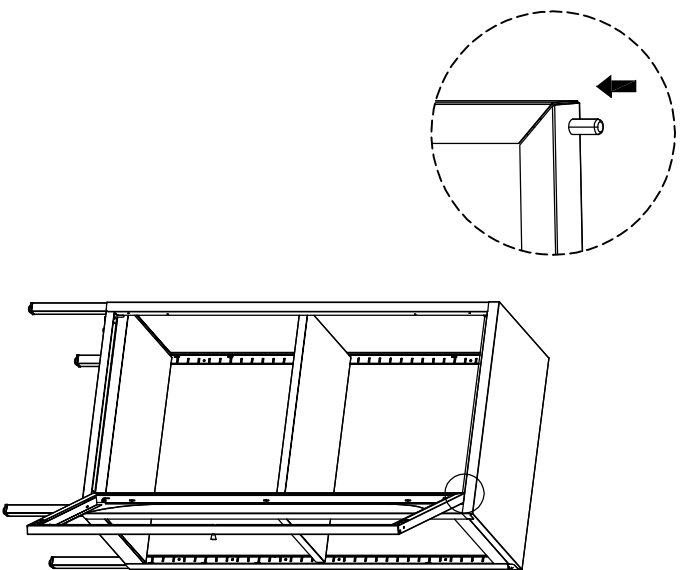

(10)

wall anchors

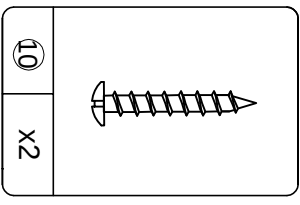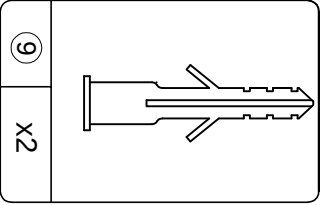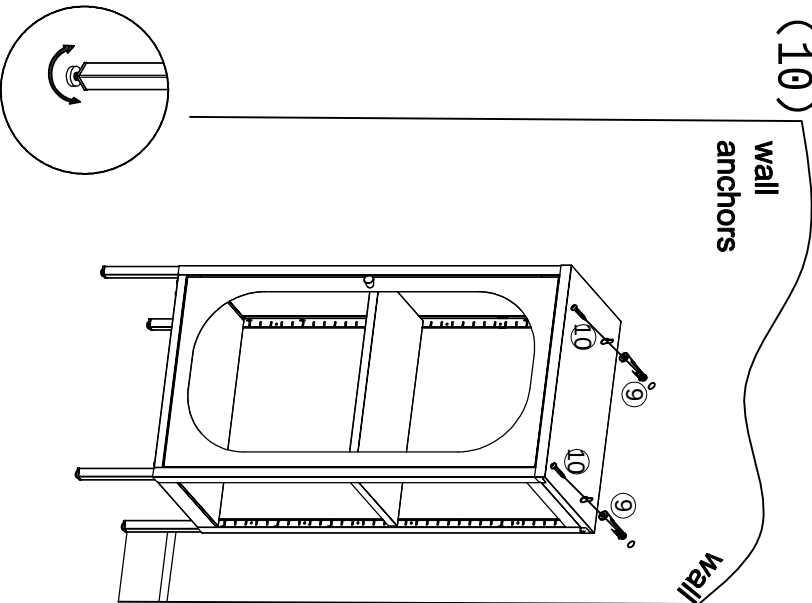

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.