
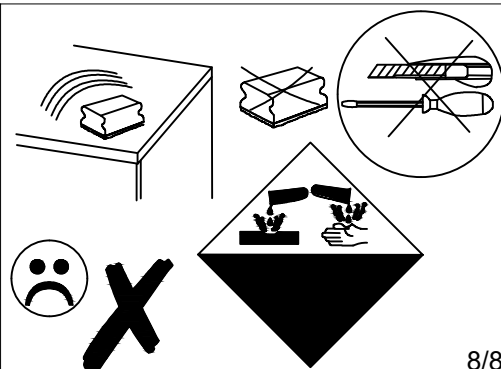
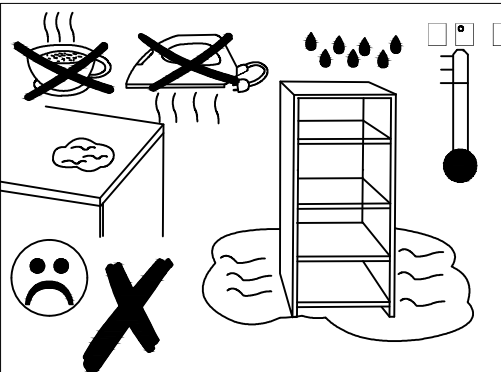
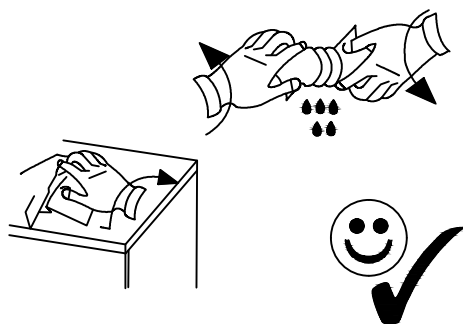
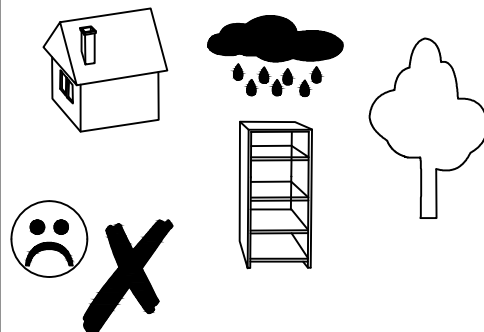


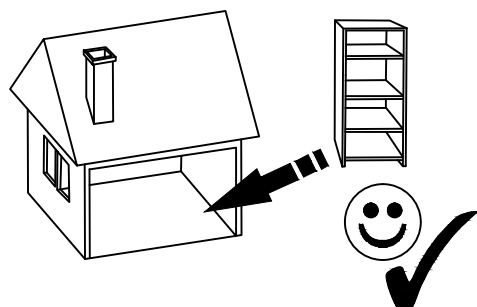


VCM.




service@vcm-gruppe.de

Aufbauanleitung








Artikel: VCM Badunterschrank+
Spiegelschrank Hausa

Service Ref. #054

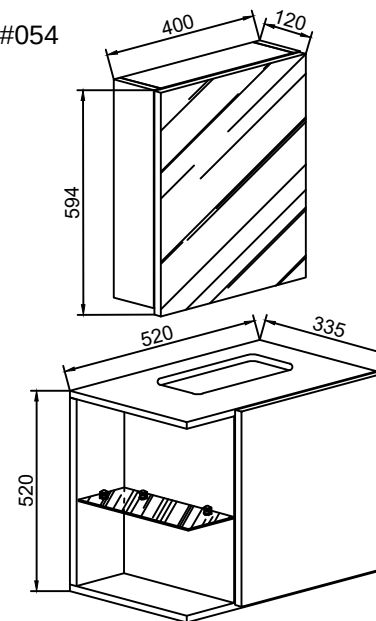

A		B		C		D		E		F	
	x14		x14		x20		x4		x4	3,5x16mm x27	
G		H		I		J		K		L	
	x3		x4	Ø8x40mm x4	4x50mm x4		x1		x4		
M		N									
	x12		0.015kg		x2	1/8					

Details			
No	L	B	pcs
1	577	100	2
2	370	100	2
3	370	96	1
4	592	397	1
5	557	395	1
6	490	320	1
7	490	320	1
8	520	320	1
9	520	320	1
10	360	90	1
11	490	130	1
12	517	387	1
13	125	300	1

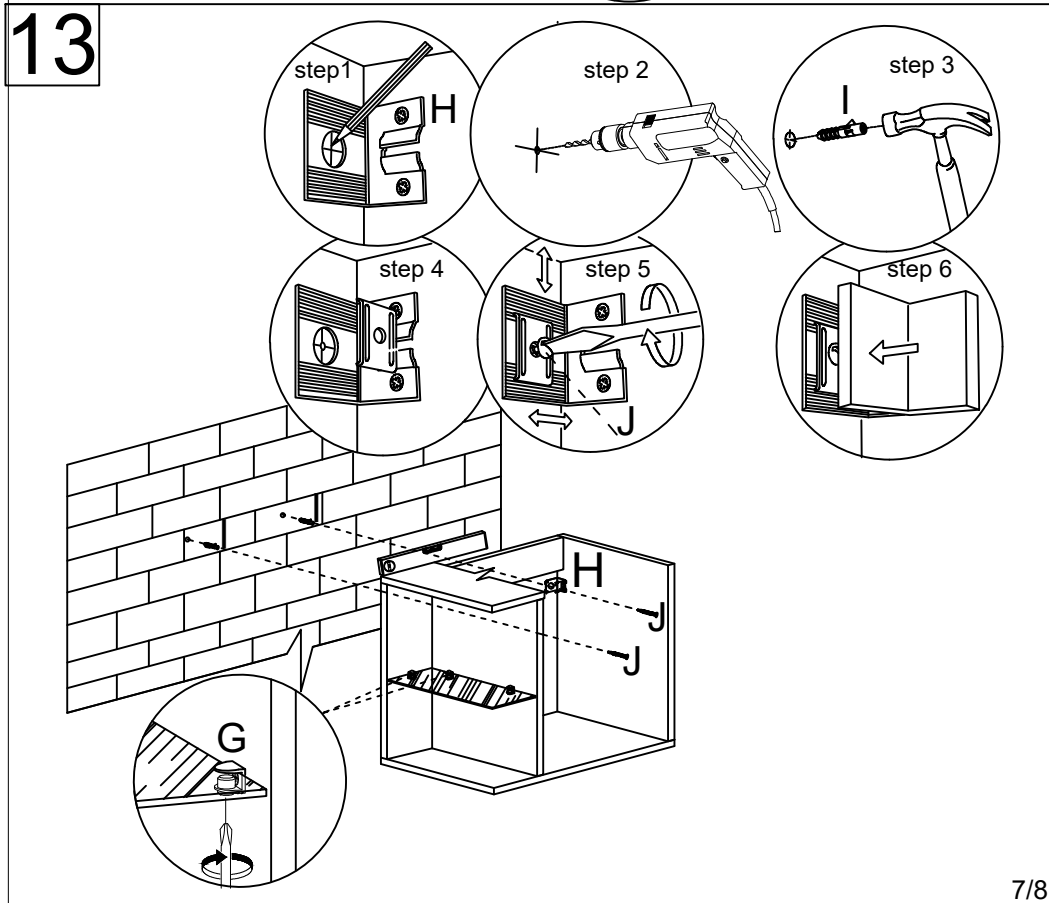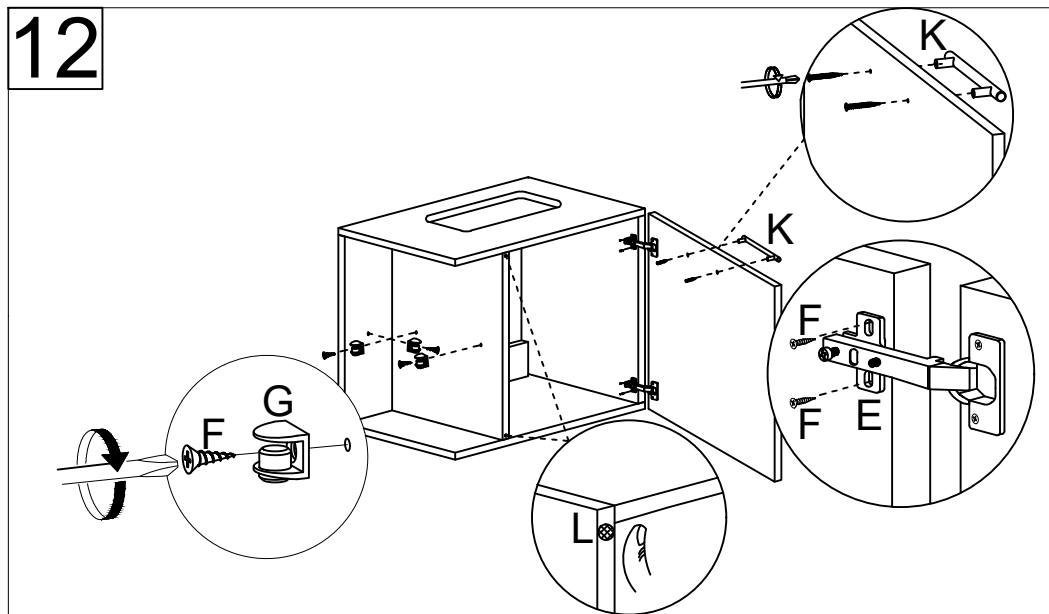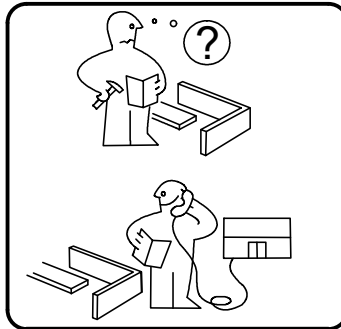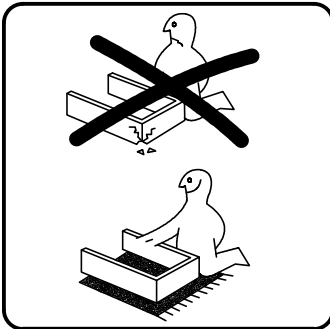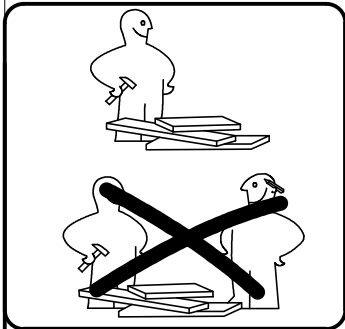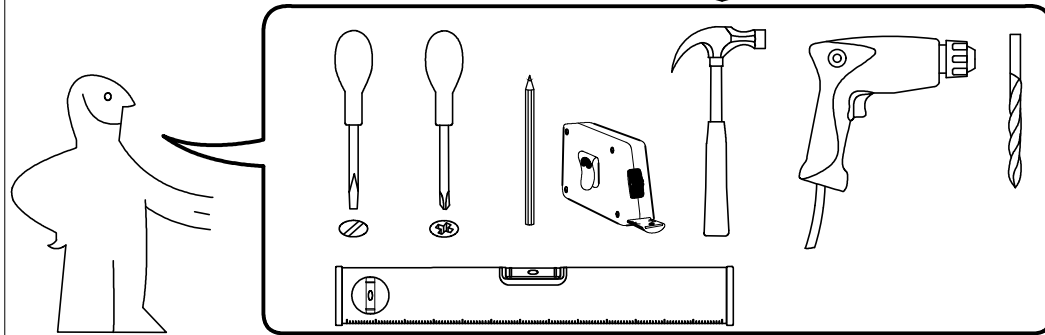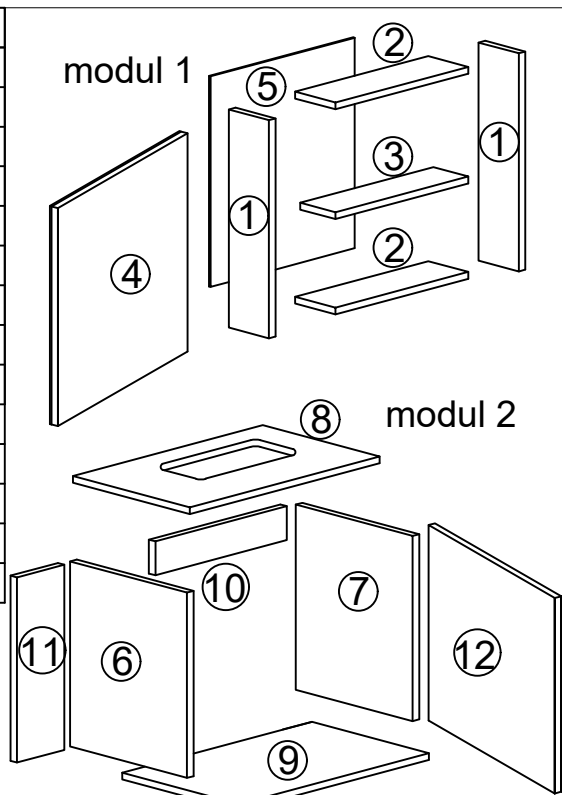

2

modul 1

The diagram illustrates the assembly of the first module. It shows two L-shaped pieces, labeled 1 and 3, being joined together. The top inset shows a pin (A) being inserted into a hole (B) using a screwdriver (C). The bottom inset shows the pin (A) being pushed into the hole (B) until it is fully seated.

3

modul 1

Diagram illustrating the assembly of the bottom panel (5) onto the frame. The panel is secured by nails (N) spaced 100-120 mm apart. The frame dimensions are labeled d1 and d2. A callout shows a hand using a hammer to drive a nail into the panel.

4

modul 1


5

modul 2


6/8

3/8

6

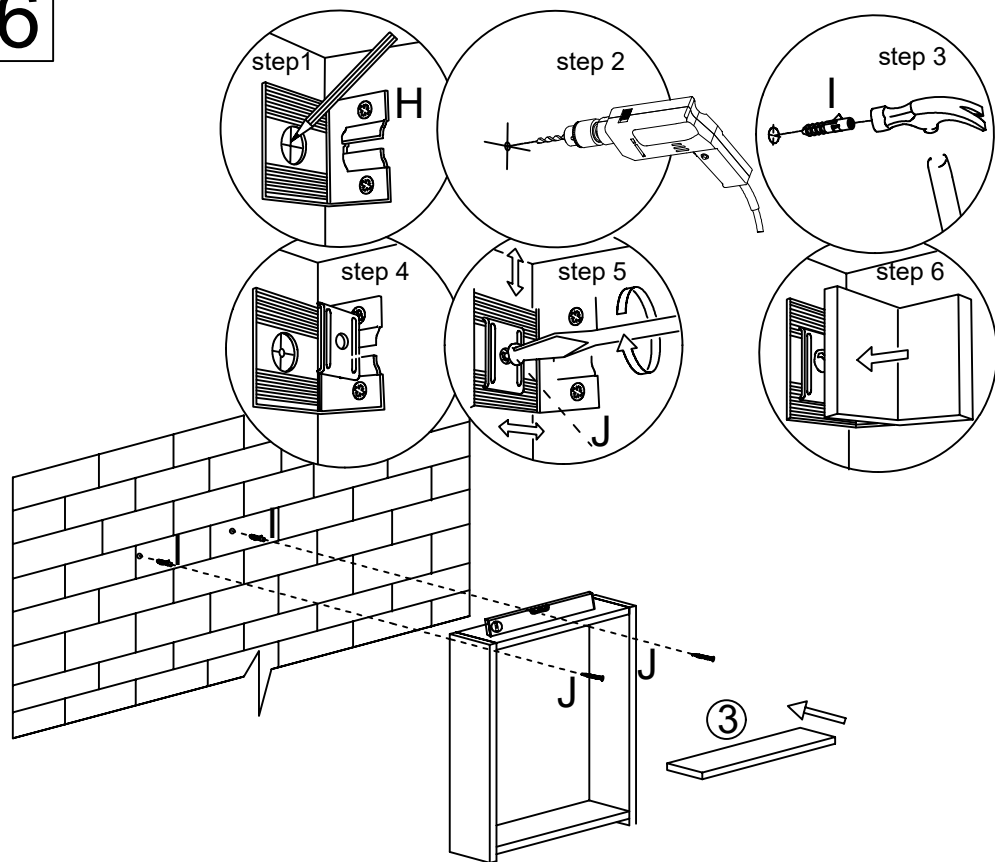


7

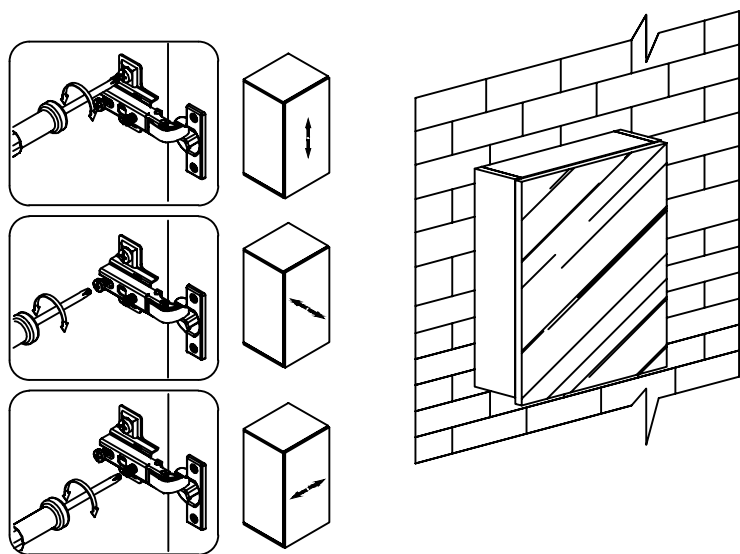


8


modul 2

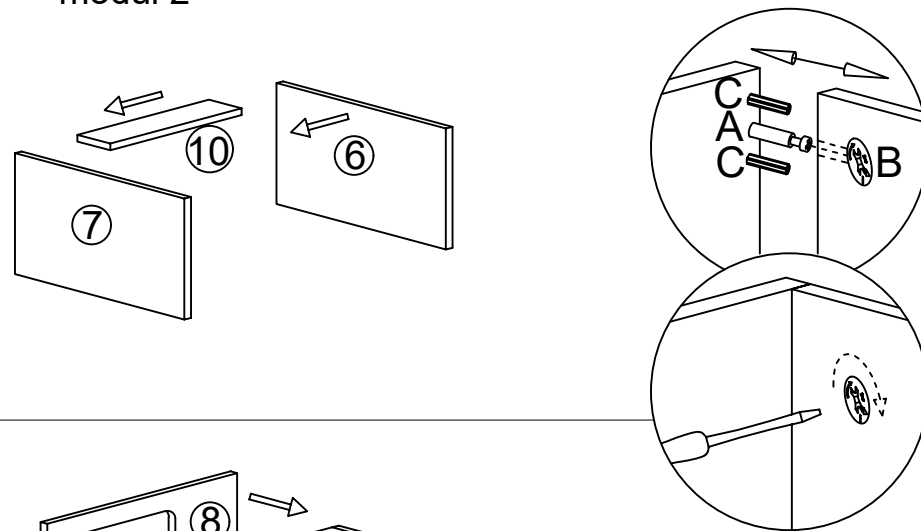

9

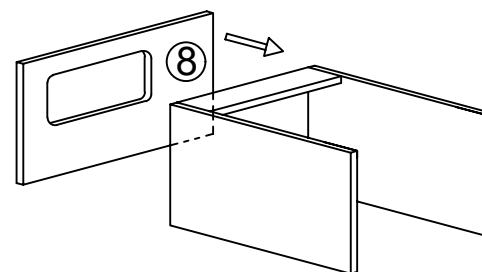

10

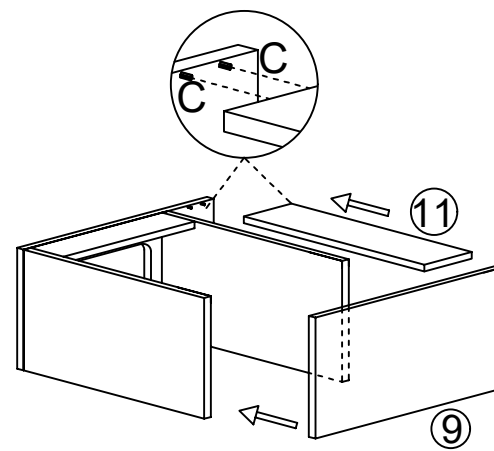

11

