






3001040

Brisbane Steel Cabinet
w. Glass Door Black


HOUSE

NORDIC

1 x41 	2 x2 ø6-30mm 	3 x2 ø12*0.8mm 	4 x12 ø4x4mm 
5 x2 	6 x4 	7 x2 	8 x2 
spare:2			

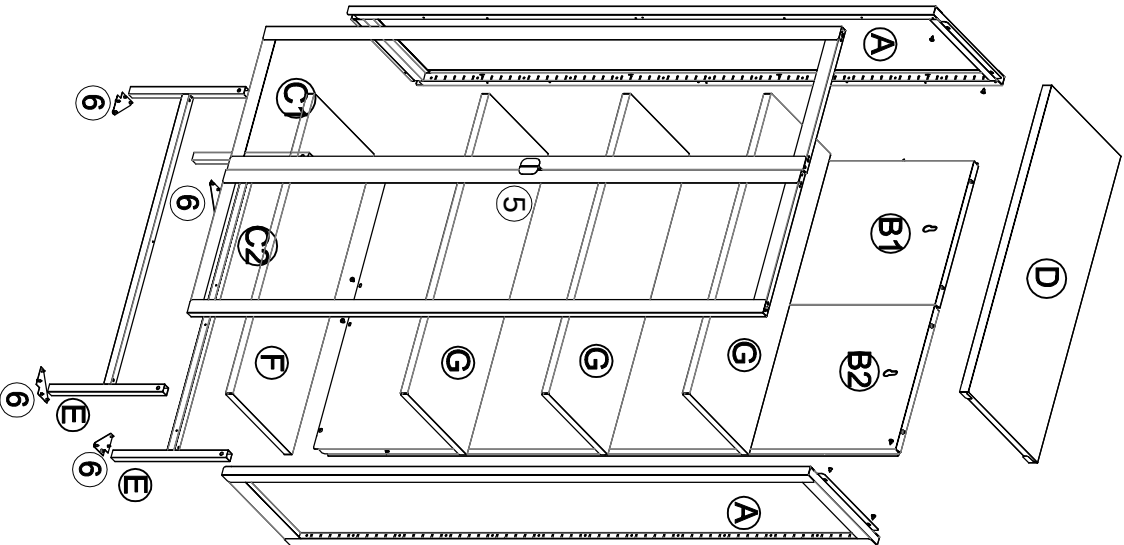


1) - Attach (A) to (E) as below shown.


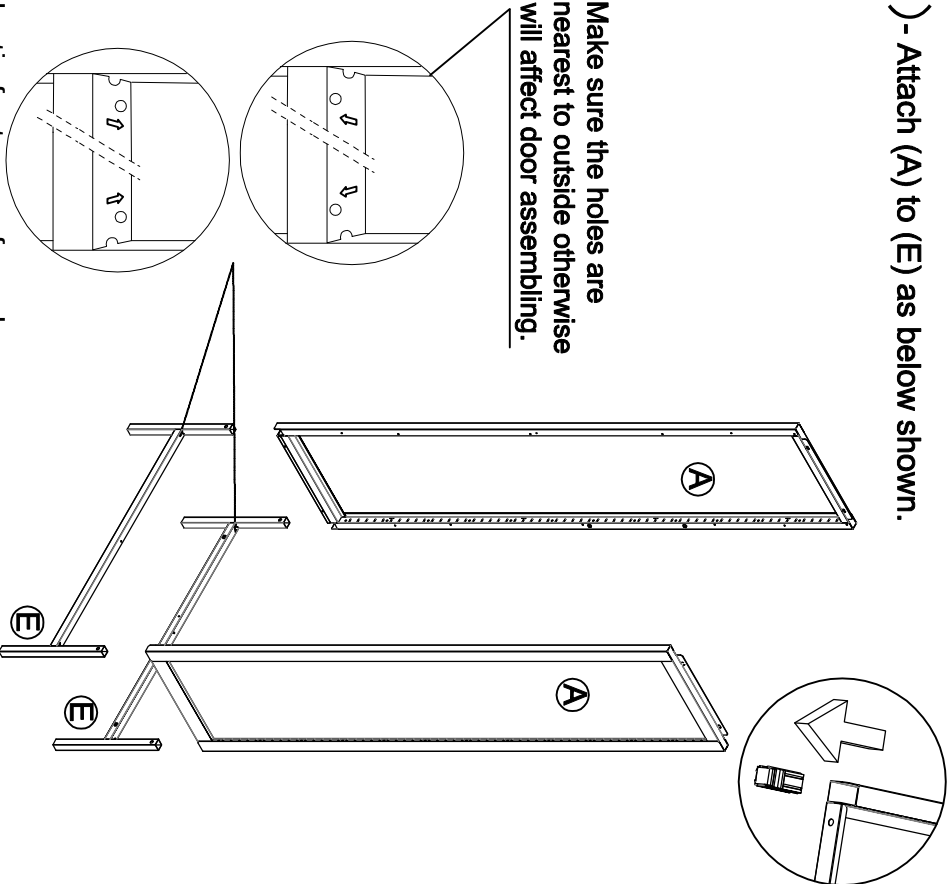


The plastic foot cover face down


3) - Attach (B) to (A) & (E) as below shown.

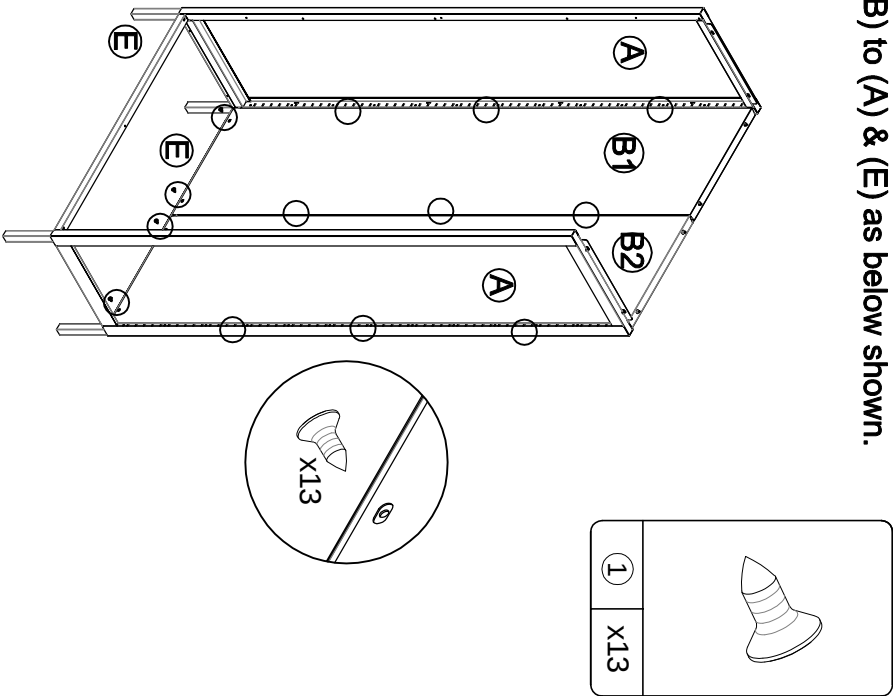



2) - Attach 6 to (E) as below shown.

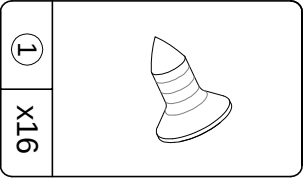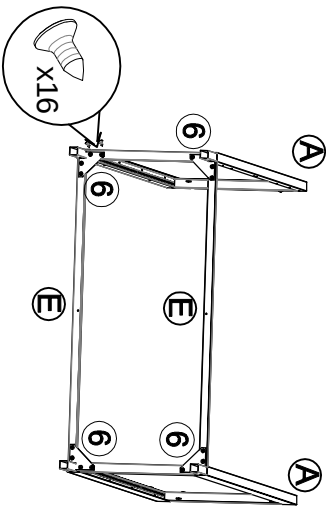



4) - Attach (F) to (A) & (B) & (E) as below shown.

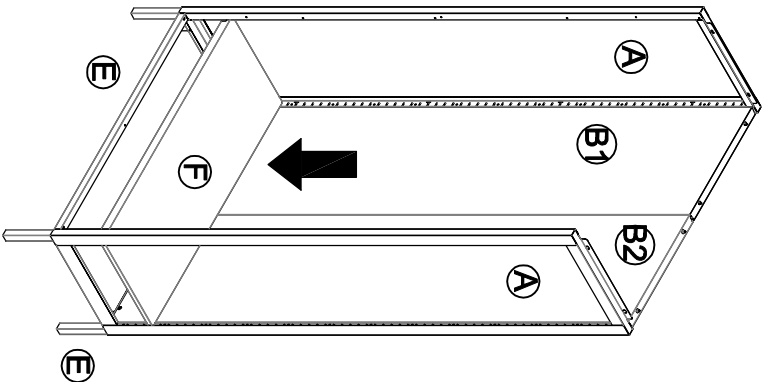



5) - Attach (D) to (A) as below shown.

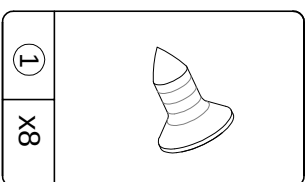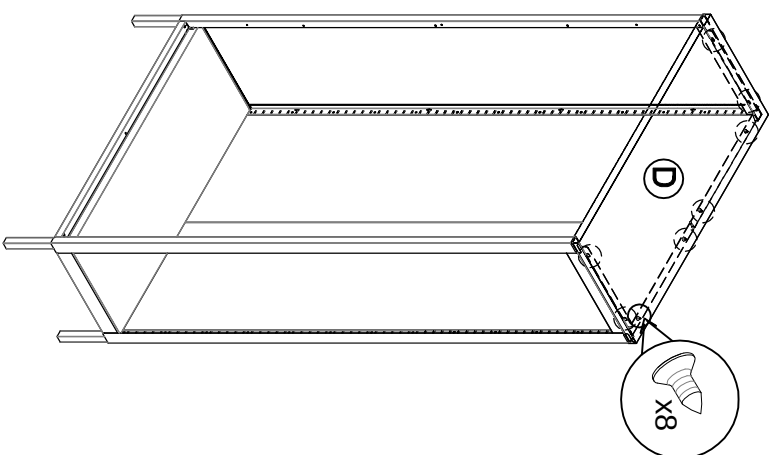


6) - Attach (G) to pre-assembled unit as below shown.

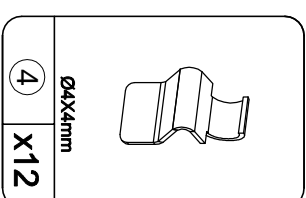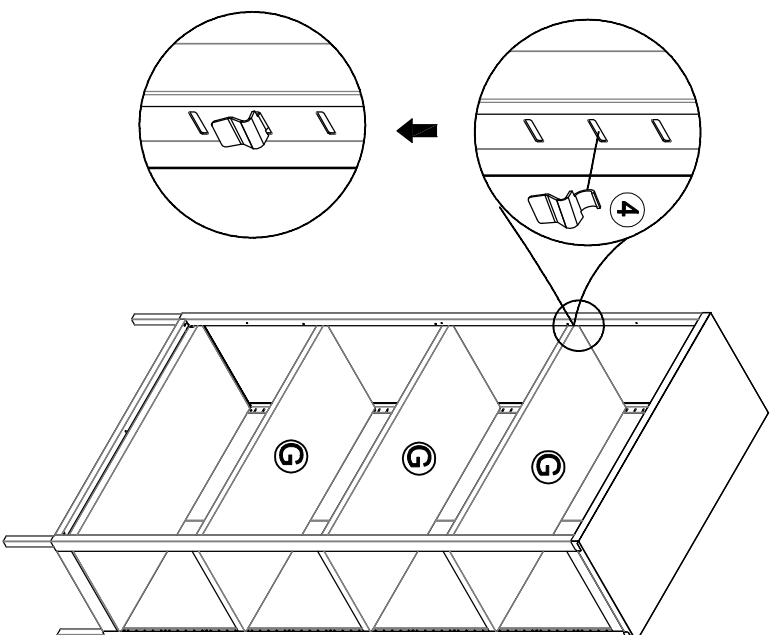



7) -Attach (2) & (3) to pre-assembled unit as below shown.

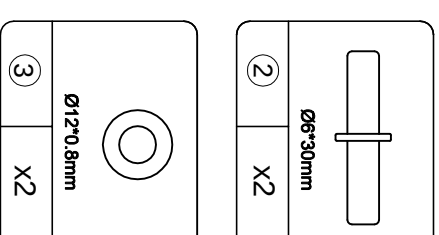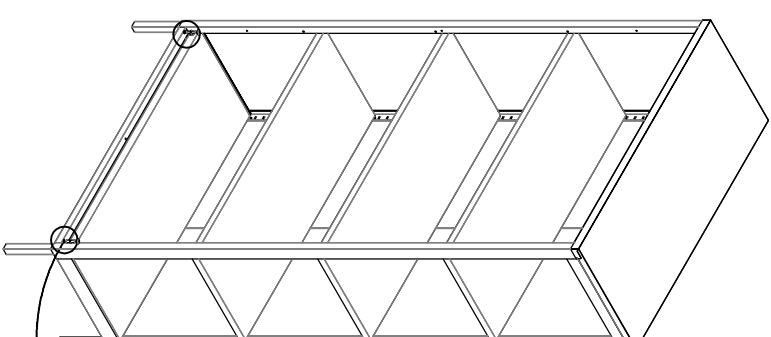



8) - Attach (C) to pre-assembled unit as below shown.

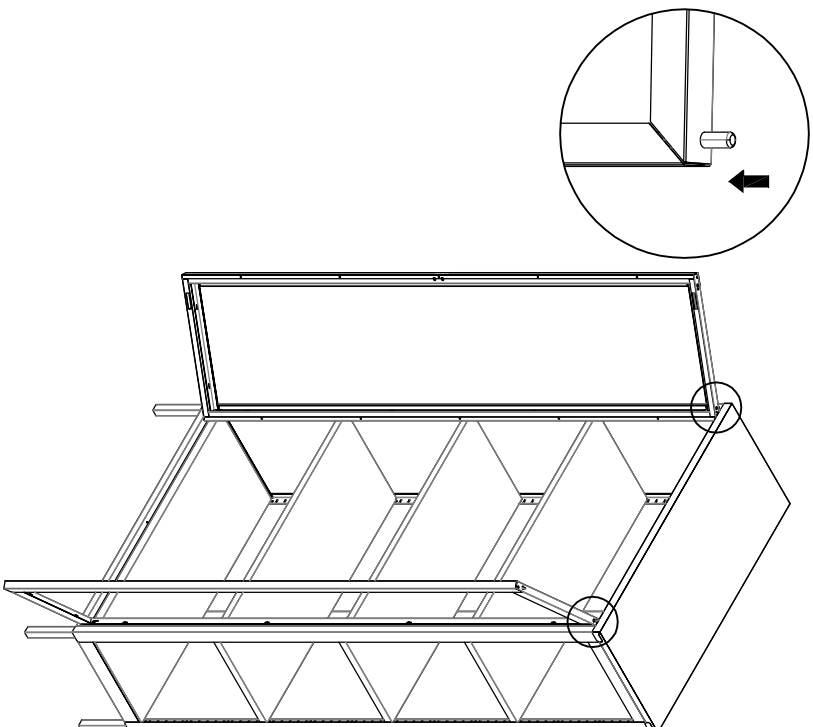

9) - Attach (5) to (C) as below shown.

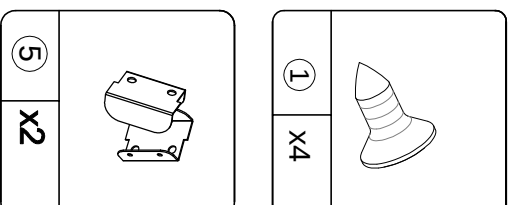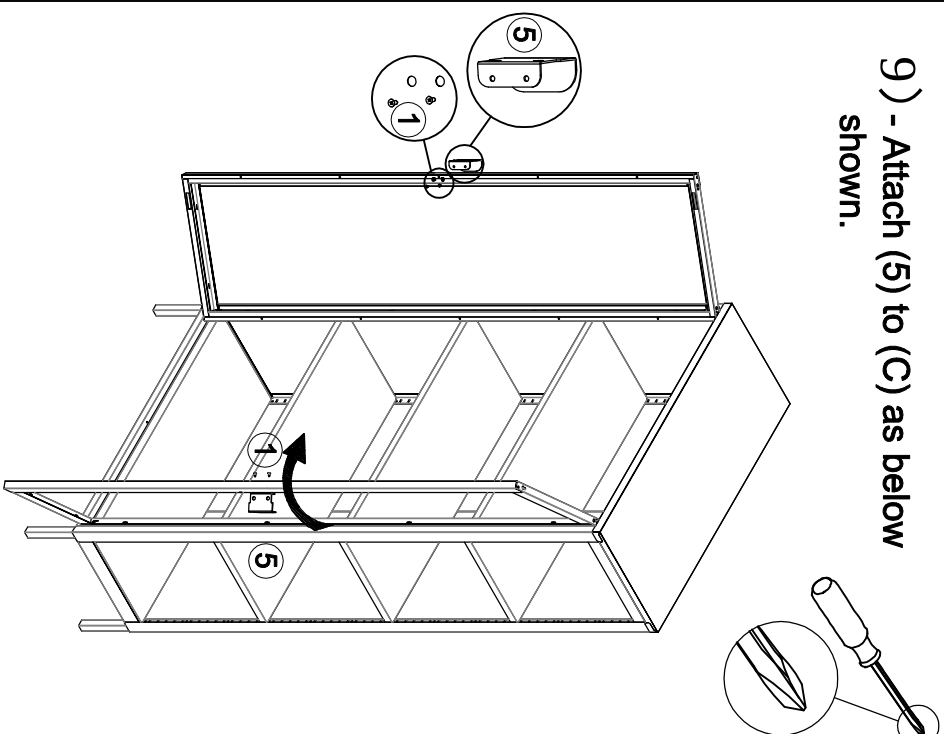

10) wall anchors

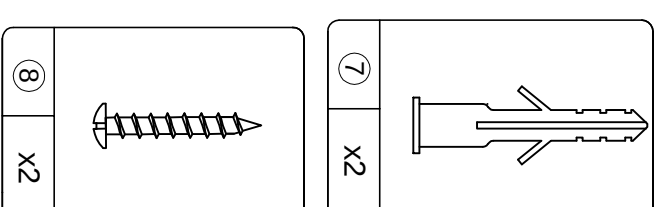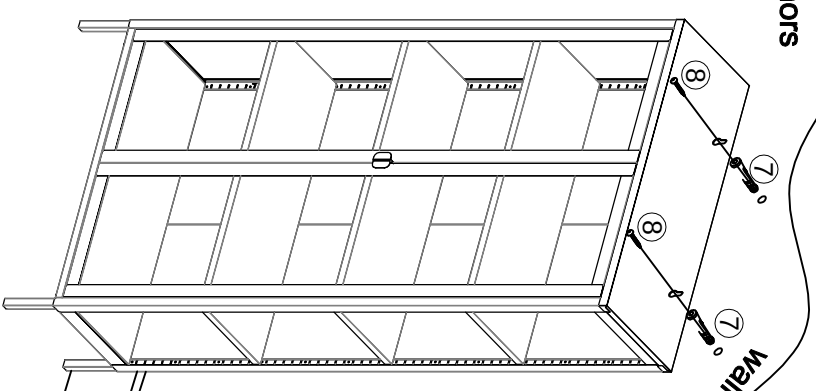

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.