

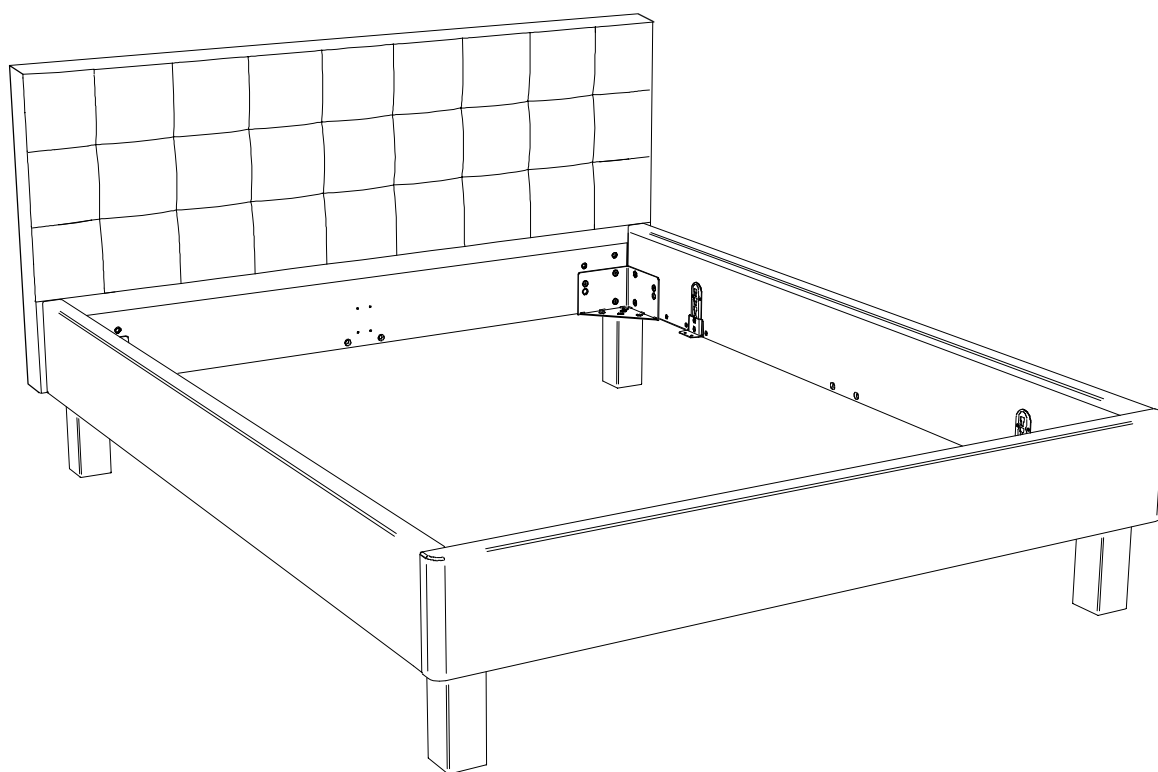
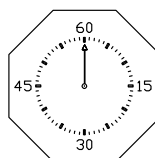










Noemi



Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

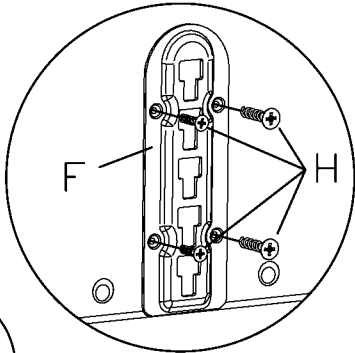


A x2 	B x1 	C x1 	D x4  630.10142	E x24 M8x20  631.87200	F x4  630.141
G x4  630.142	H x16  631.303	Z x1  631.10000			

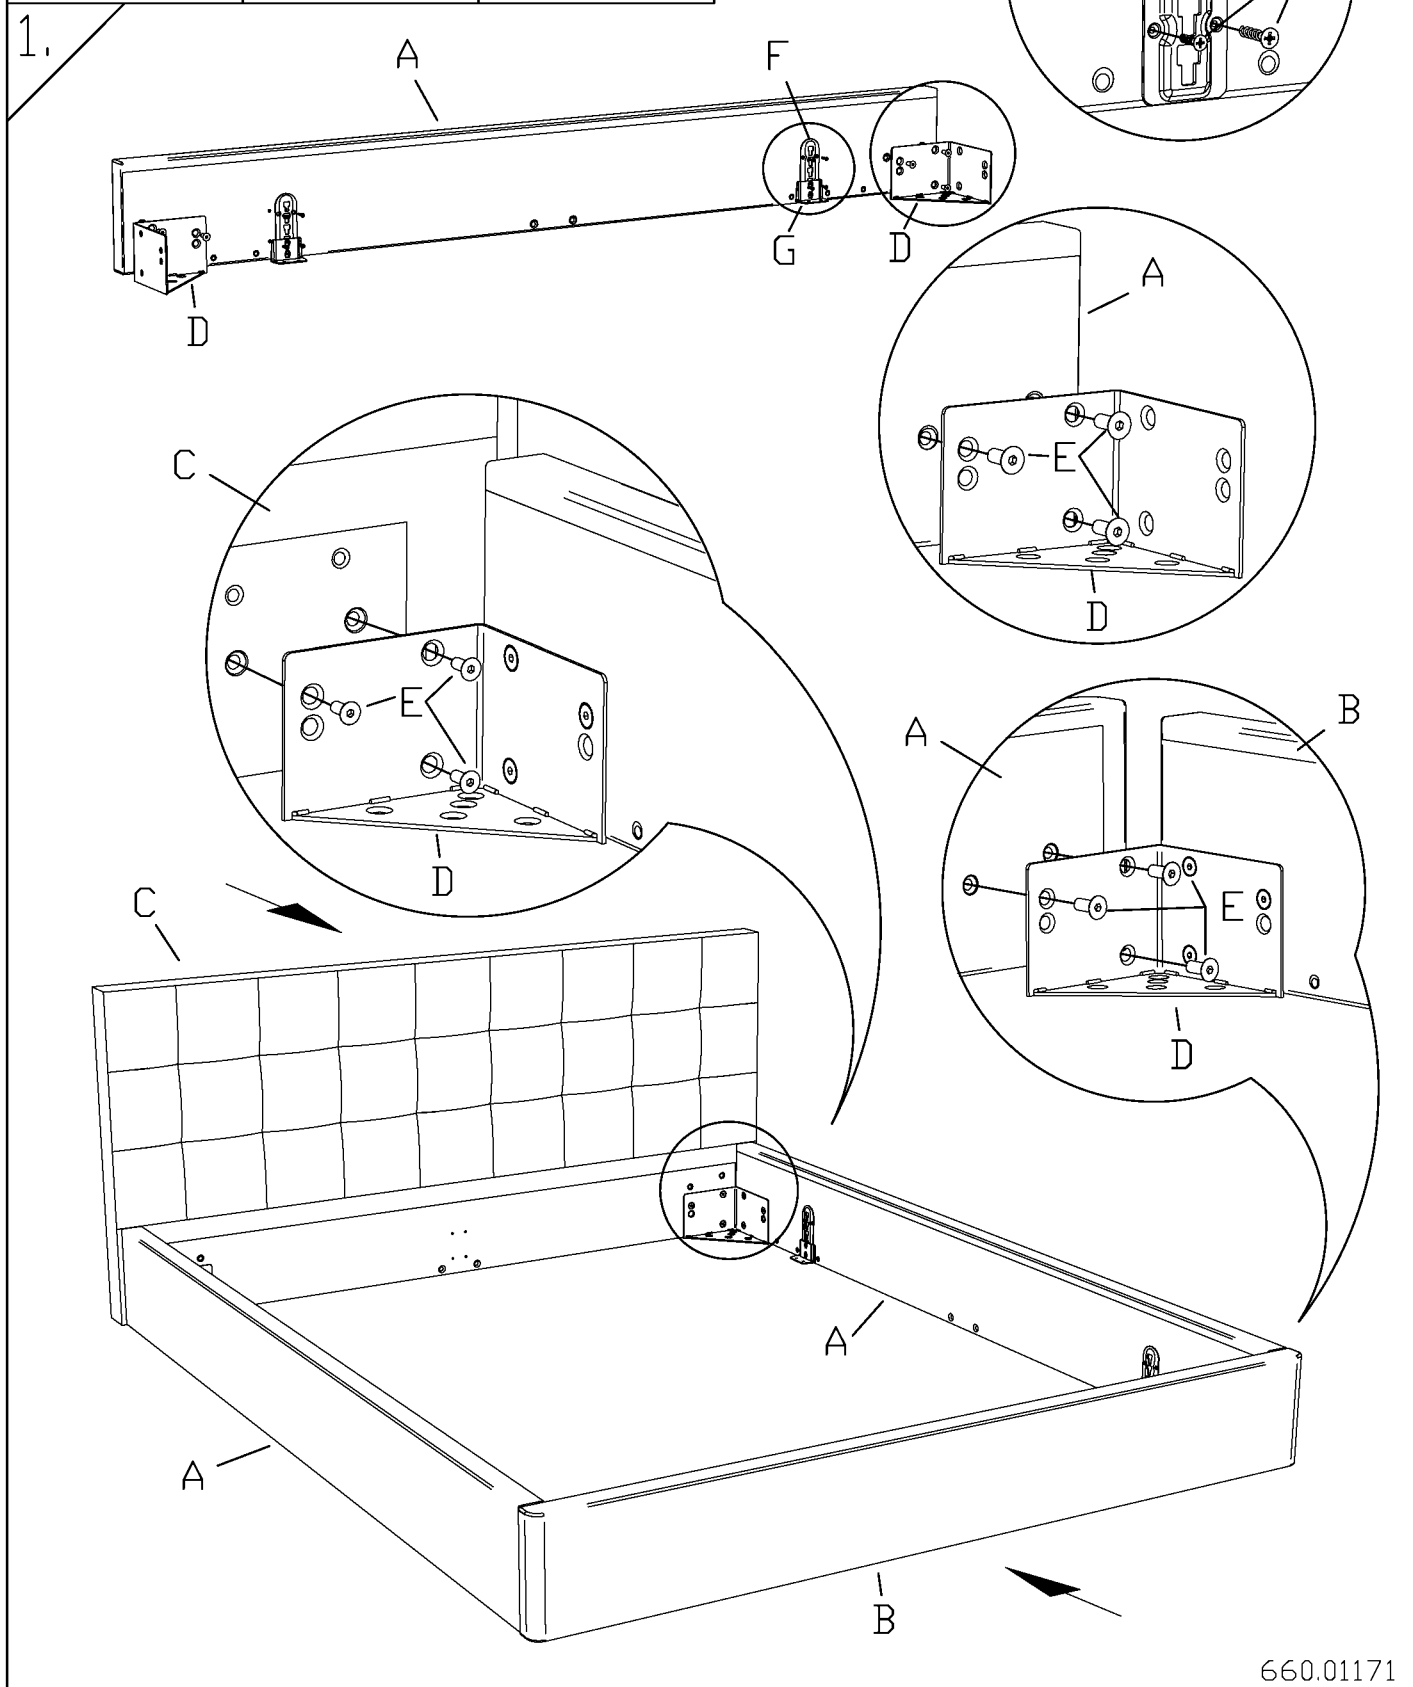

I ×4





E ×4
M8×20




631.872

2.

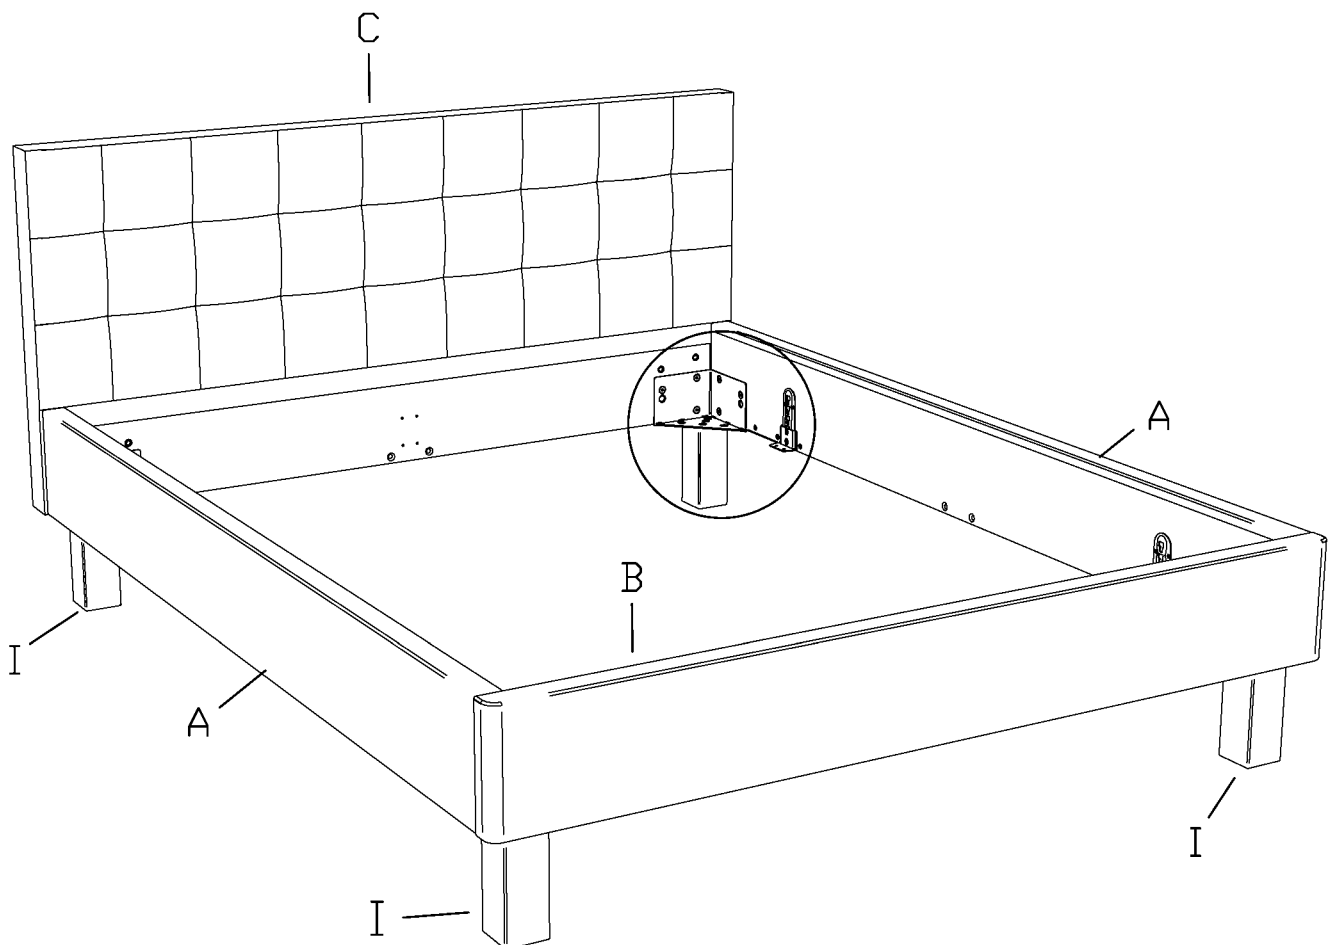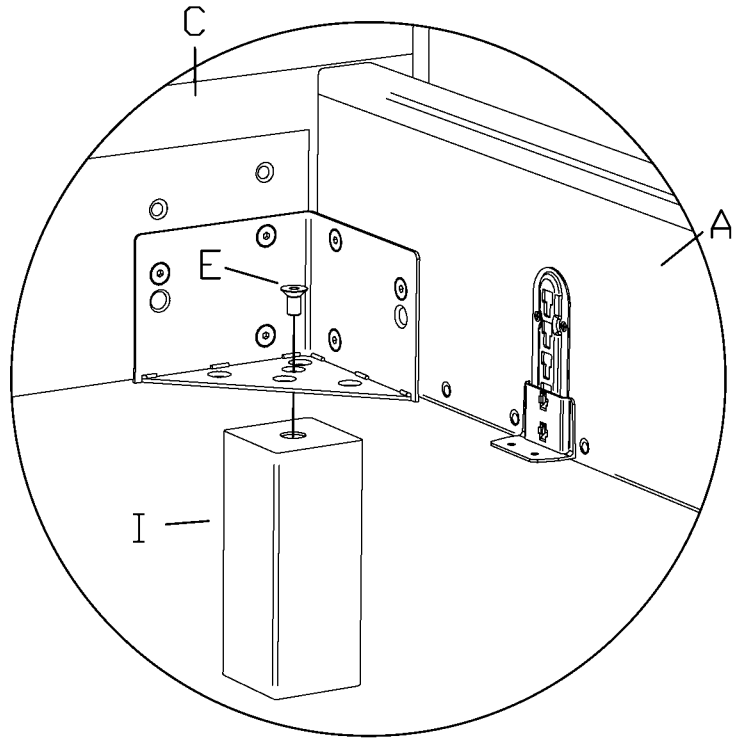


bei Breiten ab 160cm
for widths from 160cm
à partir des dimensions 160cm
della misura 160cm

L x1

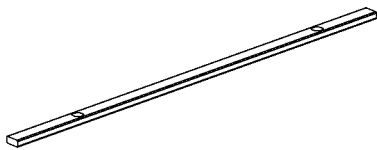


M x2




630.141

N x2



630.143

H x8



631.303

□ x4





630.177

P x2







630.185

3.

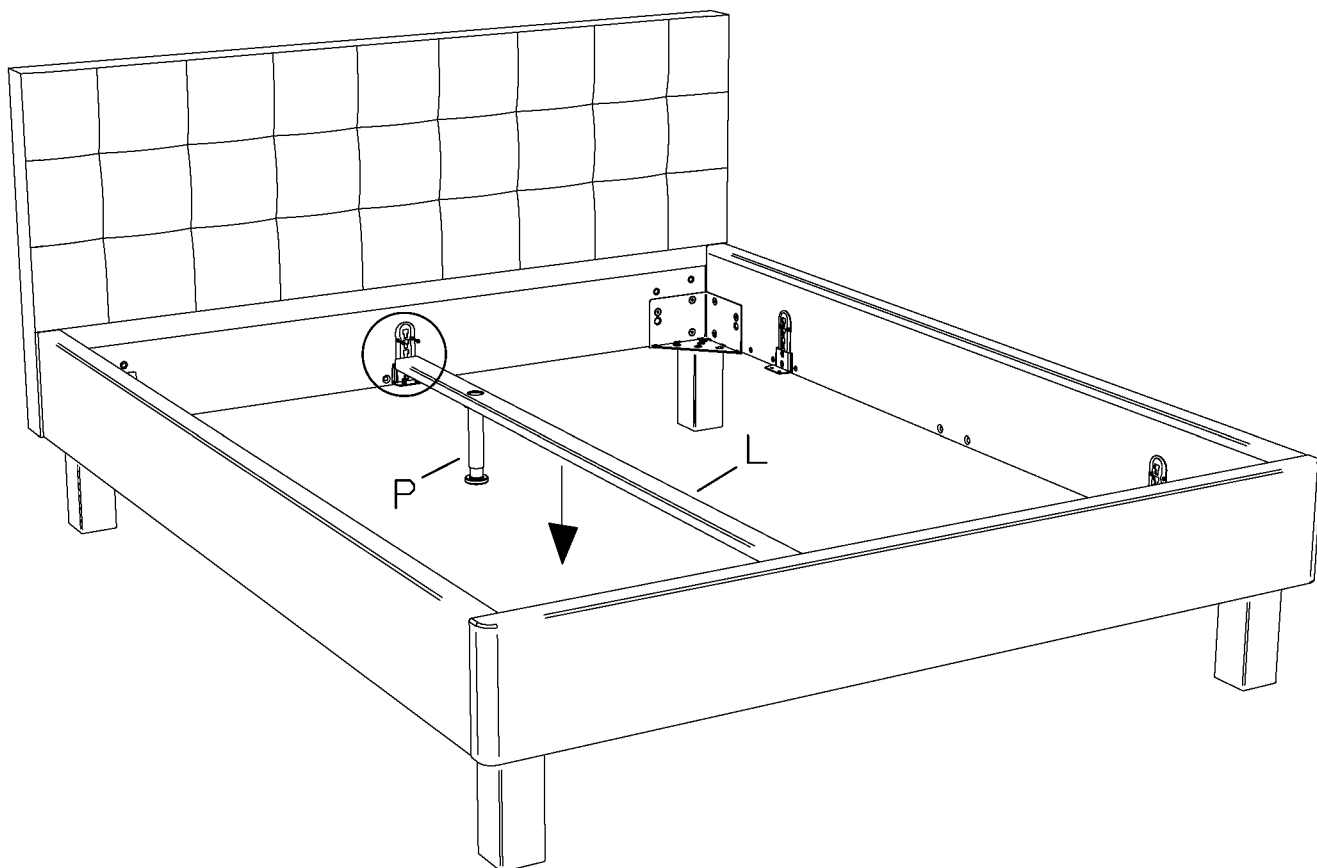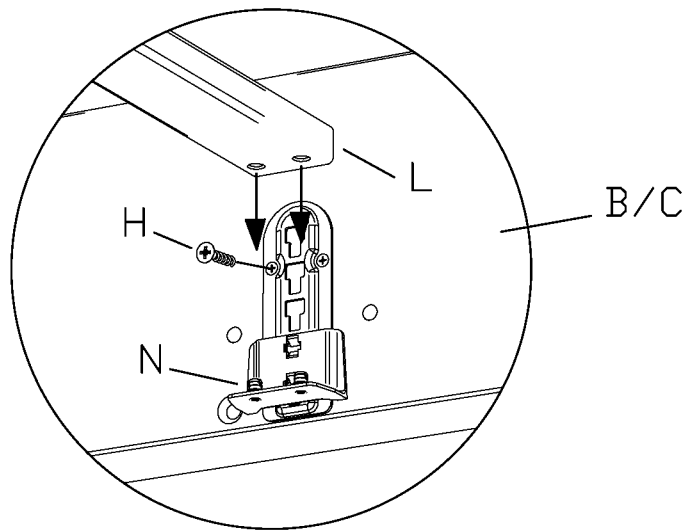

4.


E = Einlegetiefe
 E = hauteur encastrable
 E = insertion depth
 E = altezza incasso

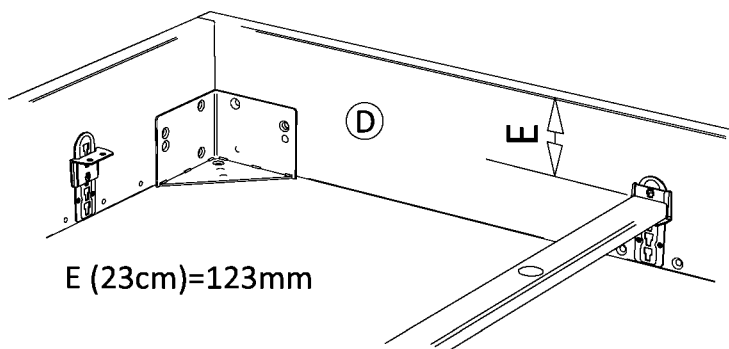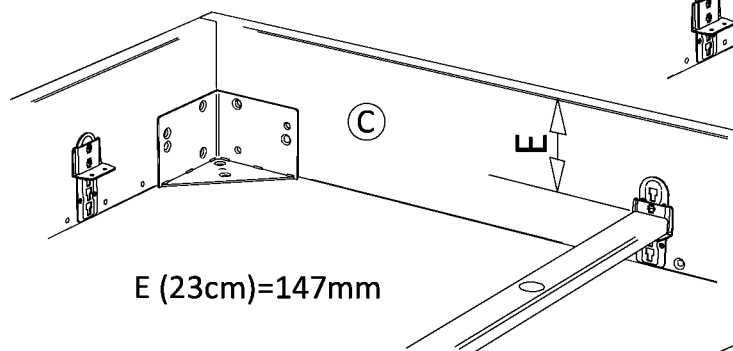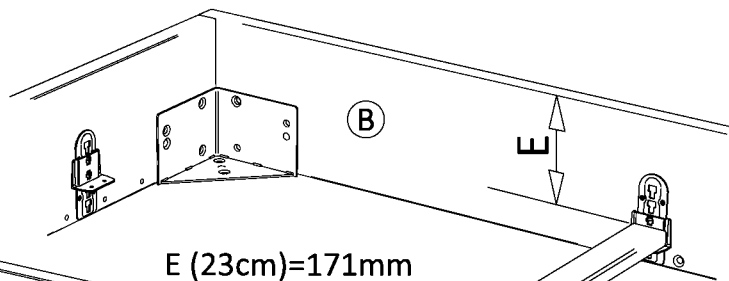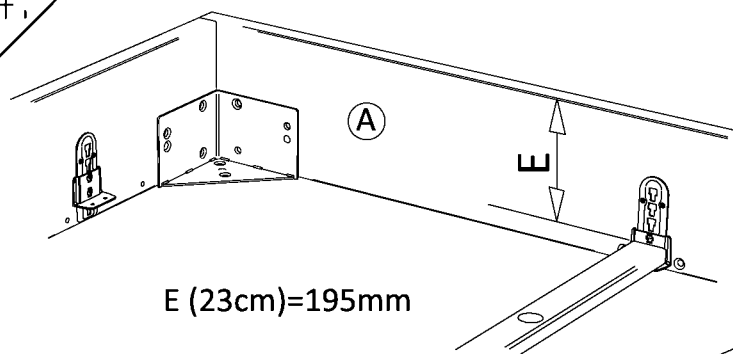



Bettfusshöhe
 Height of feet for bed
 Hauteur des pieds de lit
 Altezza piede





A / B

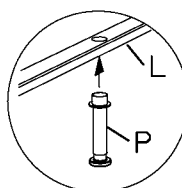


C / D

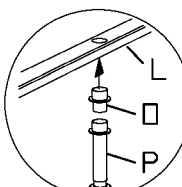

A / B

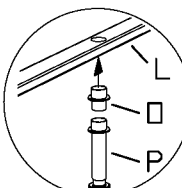

C / D

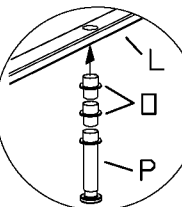

Mittelfusshöhe
 Height of middle feet
 Hauteur des pieds médians
 Altezza piede centrale