
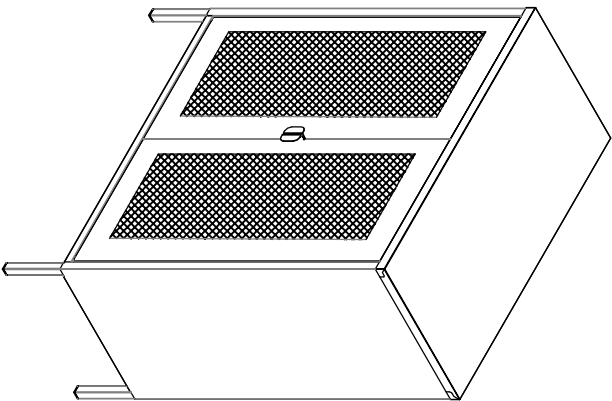




3001080
Melbourne Steel Cabinet
w. Mesh Door Black


HOUSE

NORDIC




	1	X4
	2	X2
	3	X2
	4	X8
spare: 2		
	6	X2
	7	X2
	5	X2

2) - Attach (B1) to (B2) as below shown.

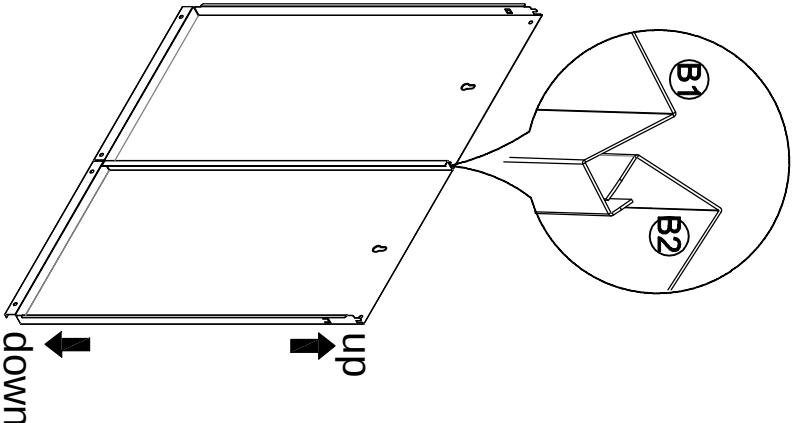



1) - Attach (A) to (E) as below shown.







Make sure the holes are nearest to outside otherwise will affect door assembling.

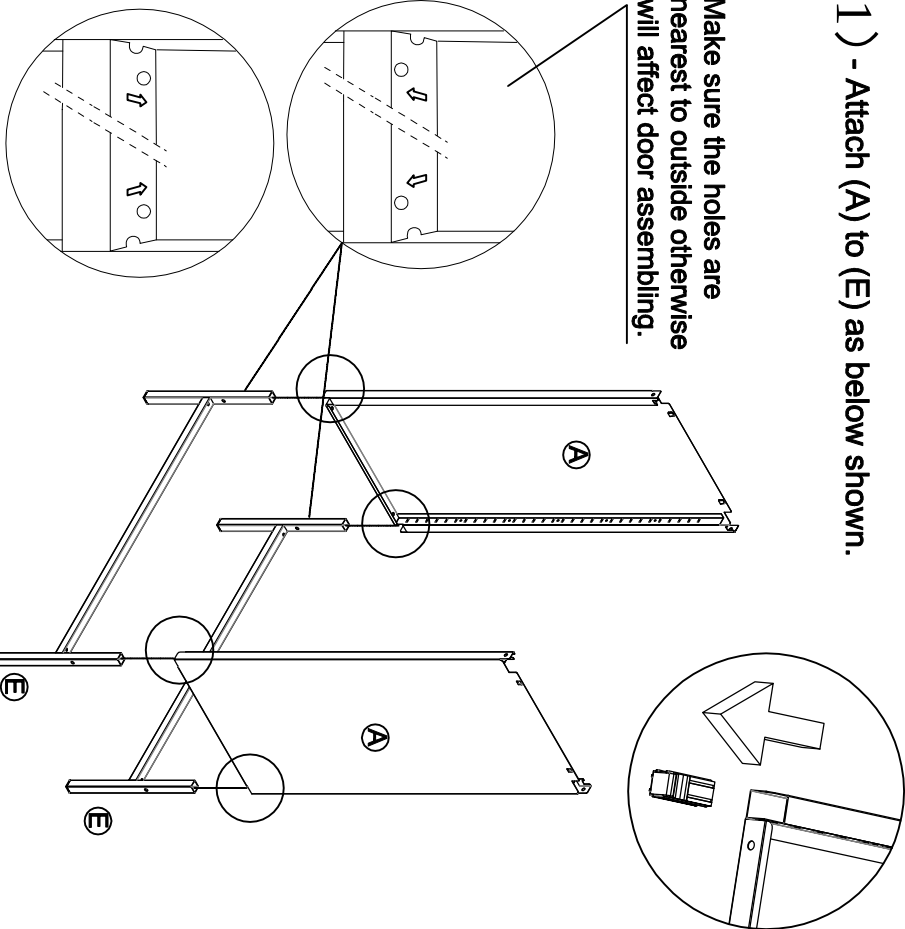

3) - Attach (B1) & (B2) to (A) & (E) as below shown.

Push and bend the tab.

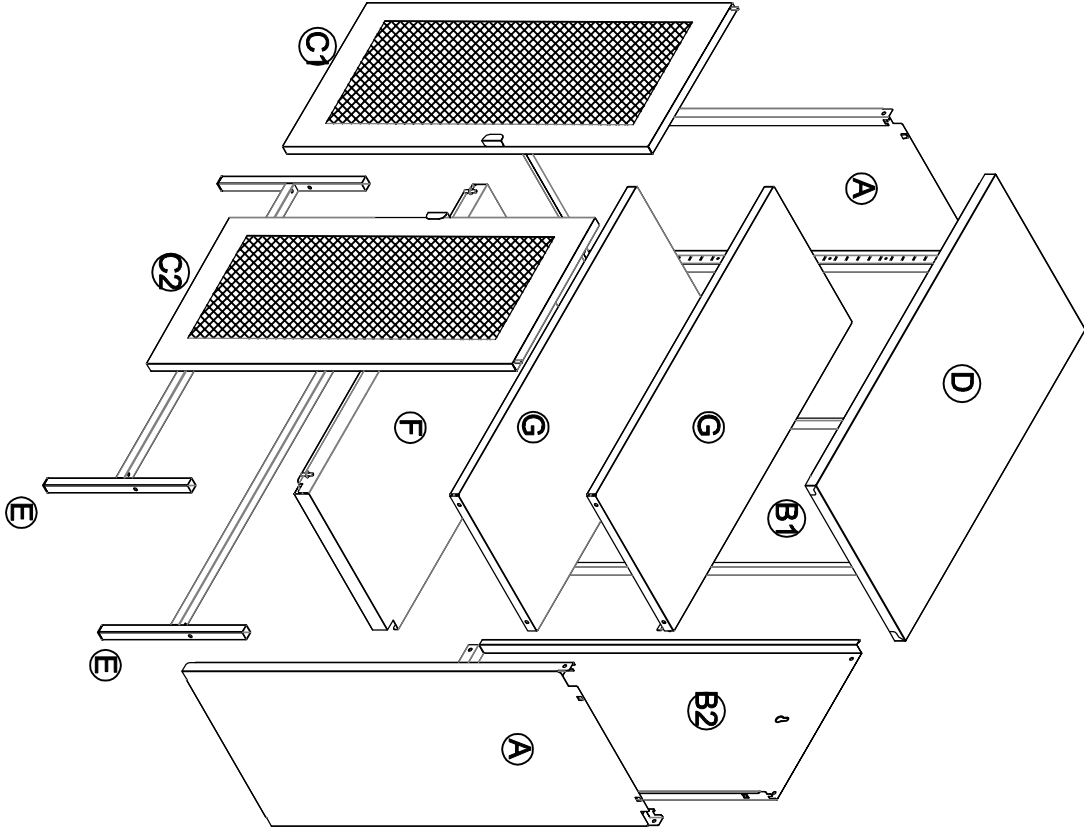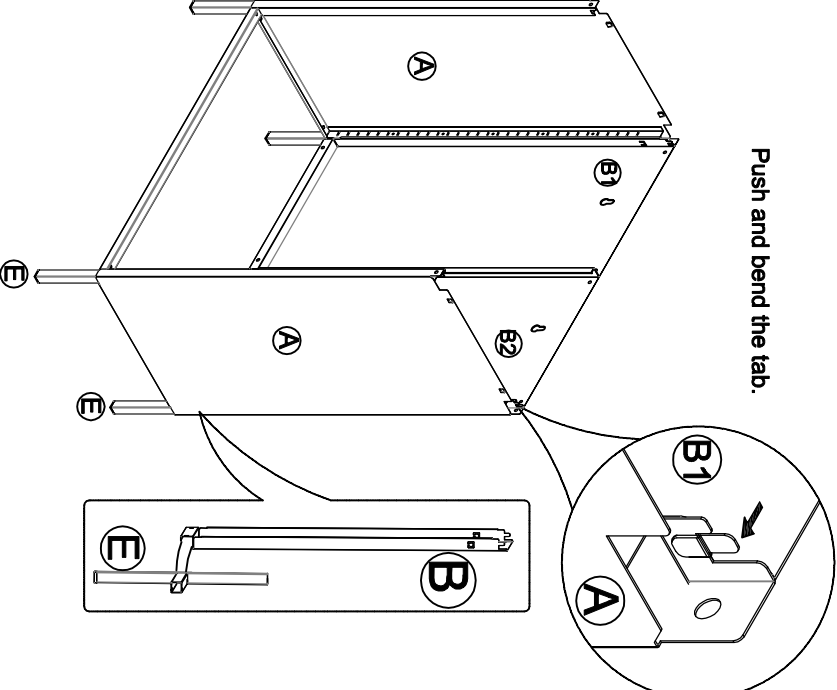

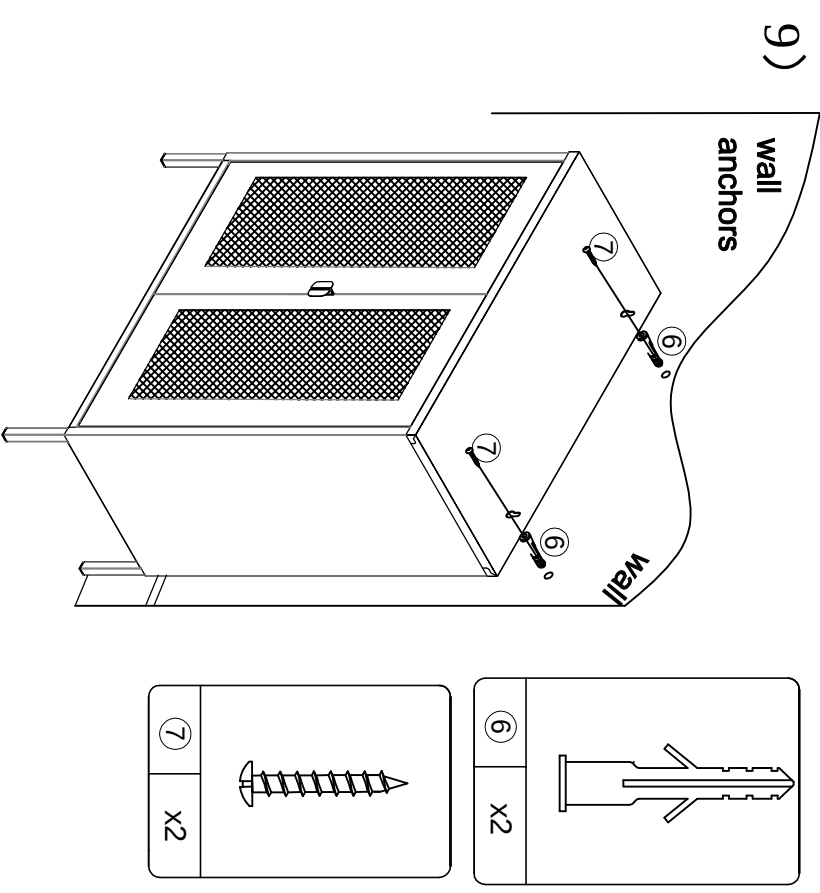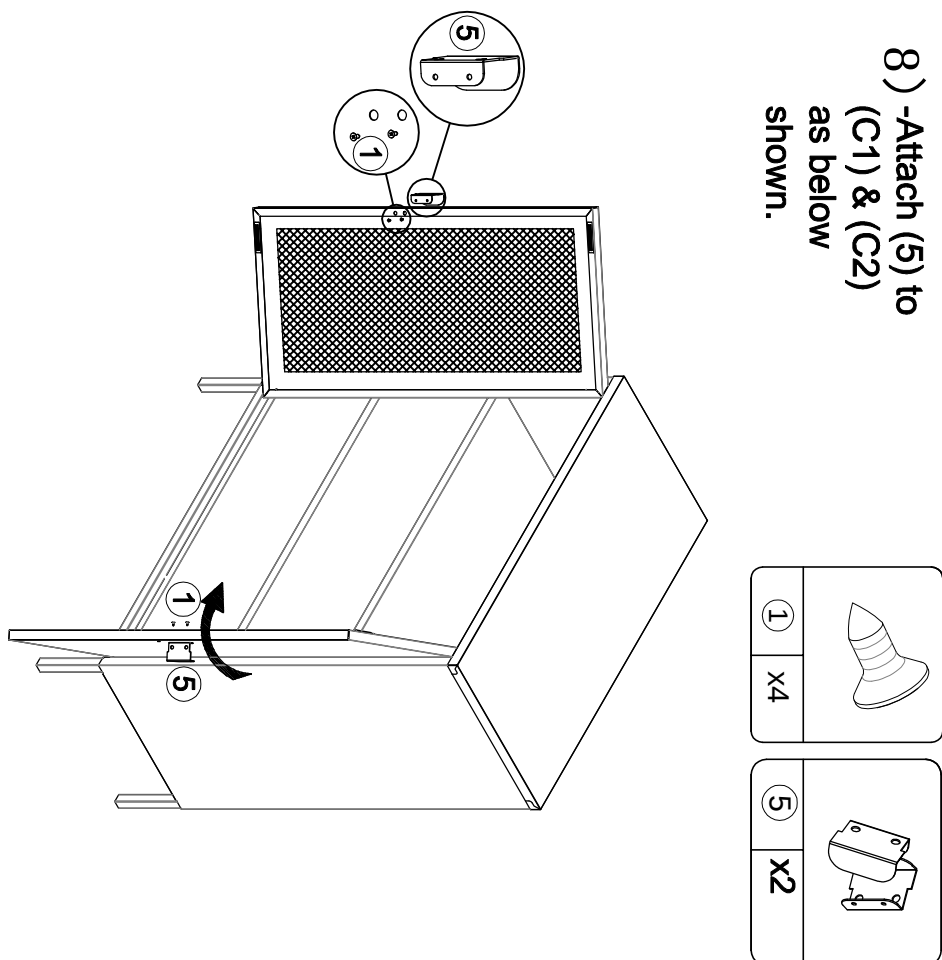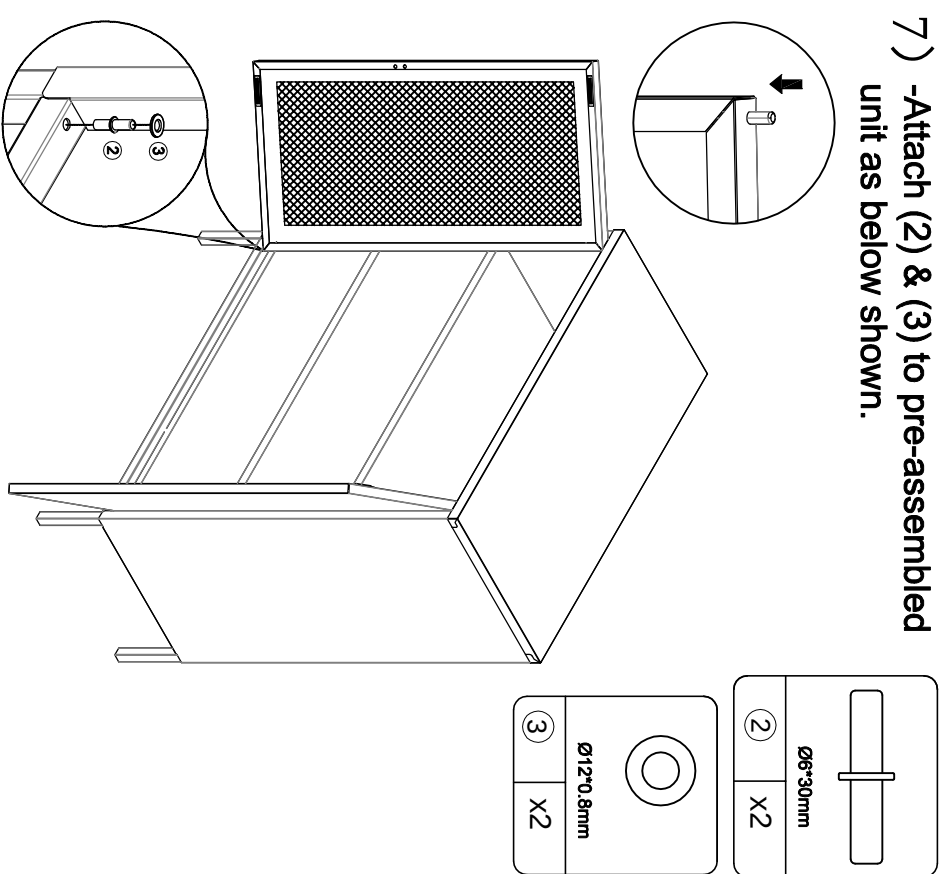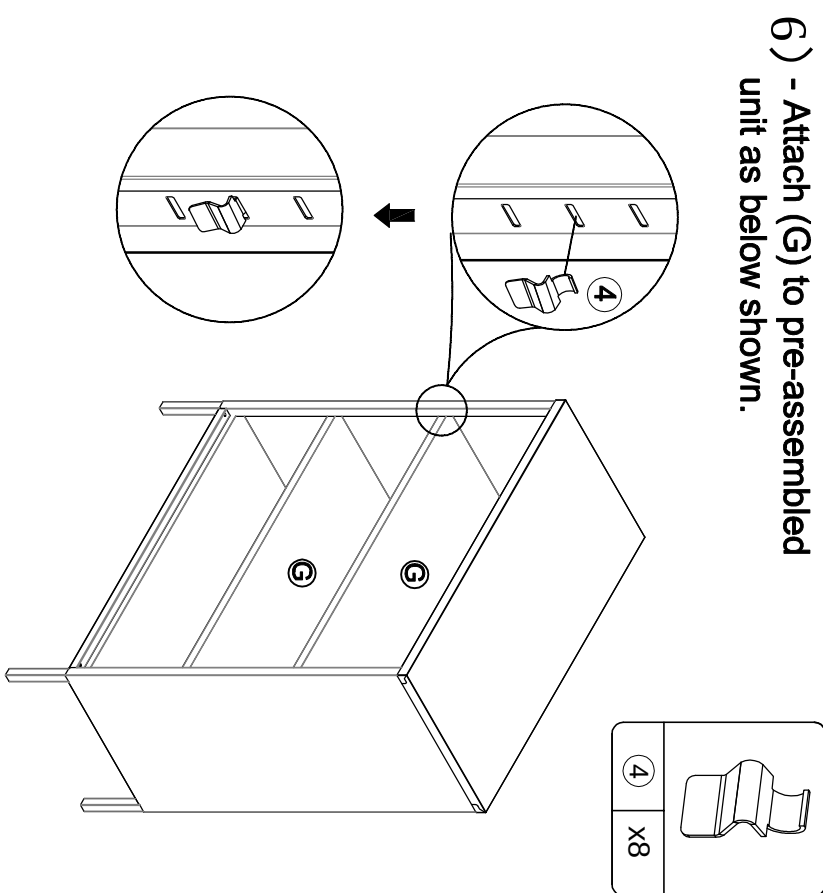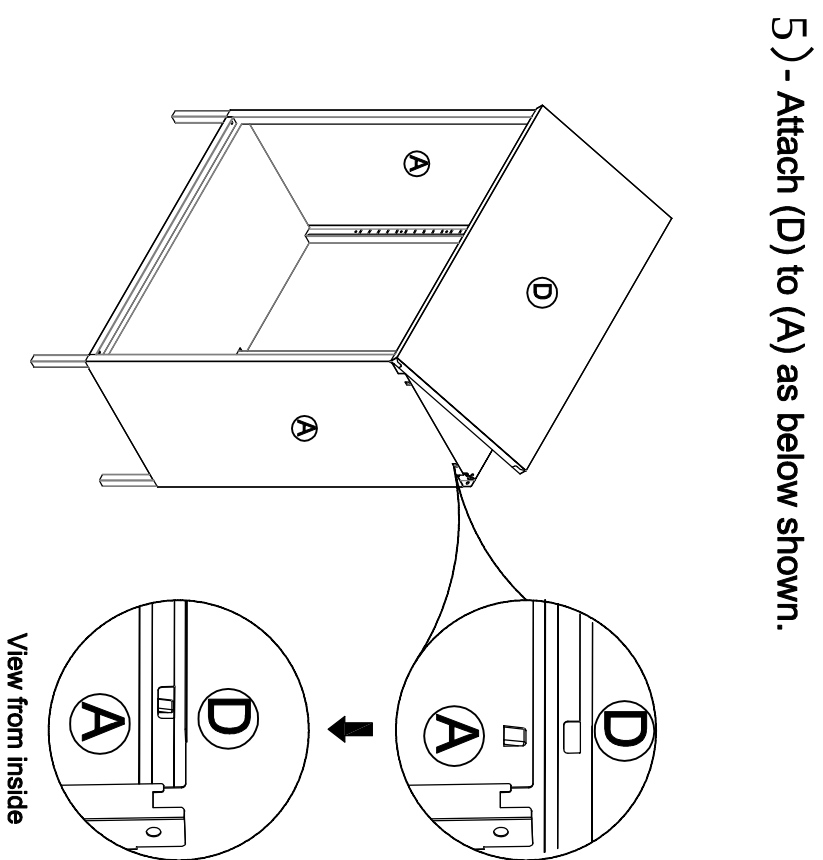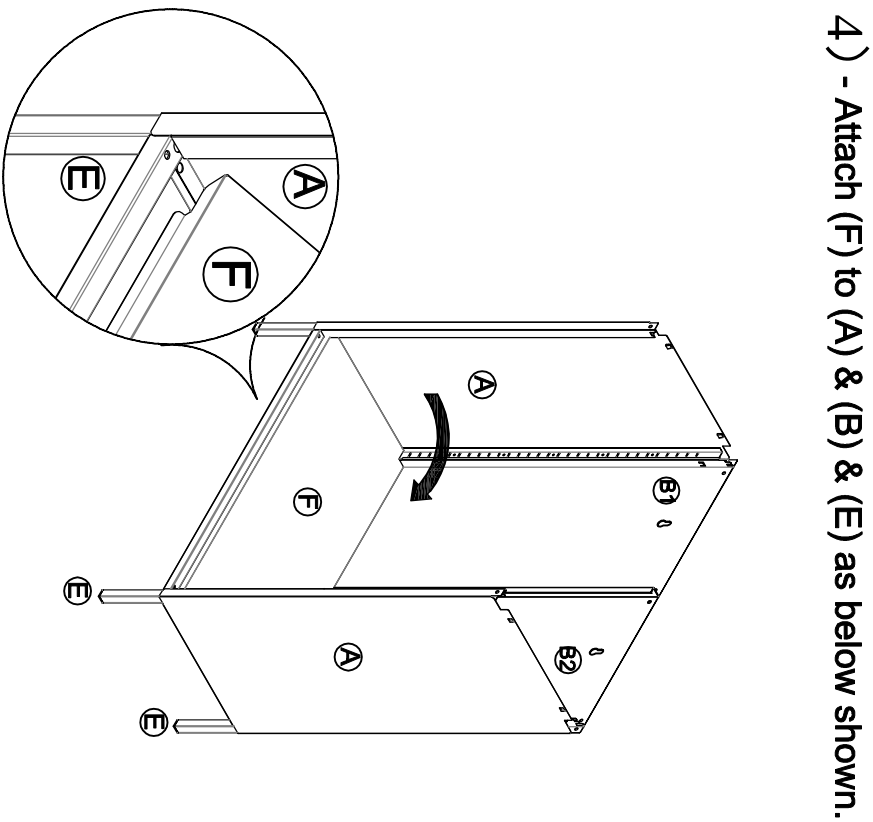

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.