






3001045


Brisbane Steel Cabinet

w. Glass Door Black


HOUSE

NORDIC

	1	x38
	2	x2
	3	x2
	4	x8
ø6-30mm		
ø12x0.8mm		
ø4x4mm		
spare:2		
	5	x2
	6	x4
	7	x2
	8	x2

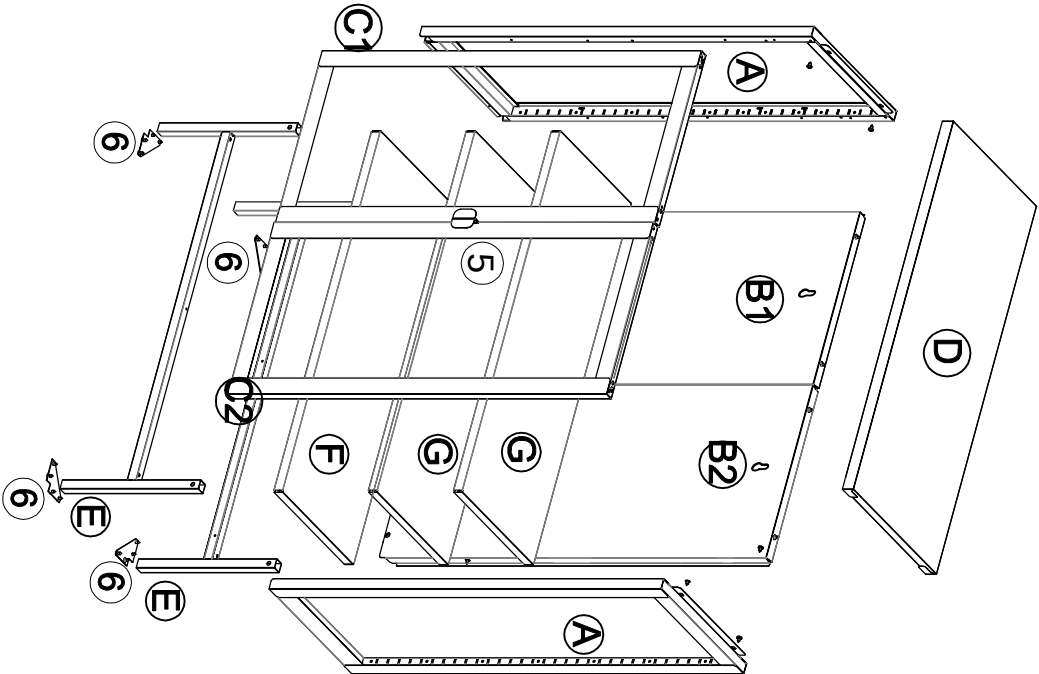


1) - Attach (A) to (E) as below shown.

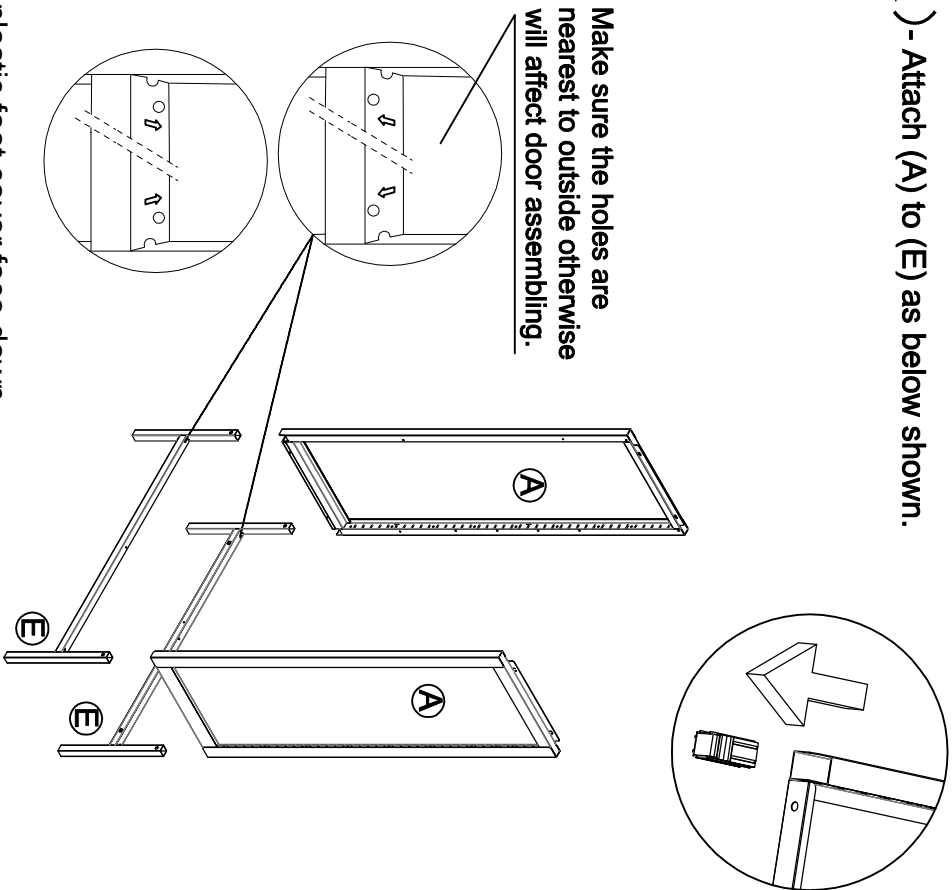


The plastic foot cover face down


3) - Attach (B) to (A) & (E) as below shown.

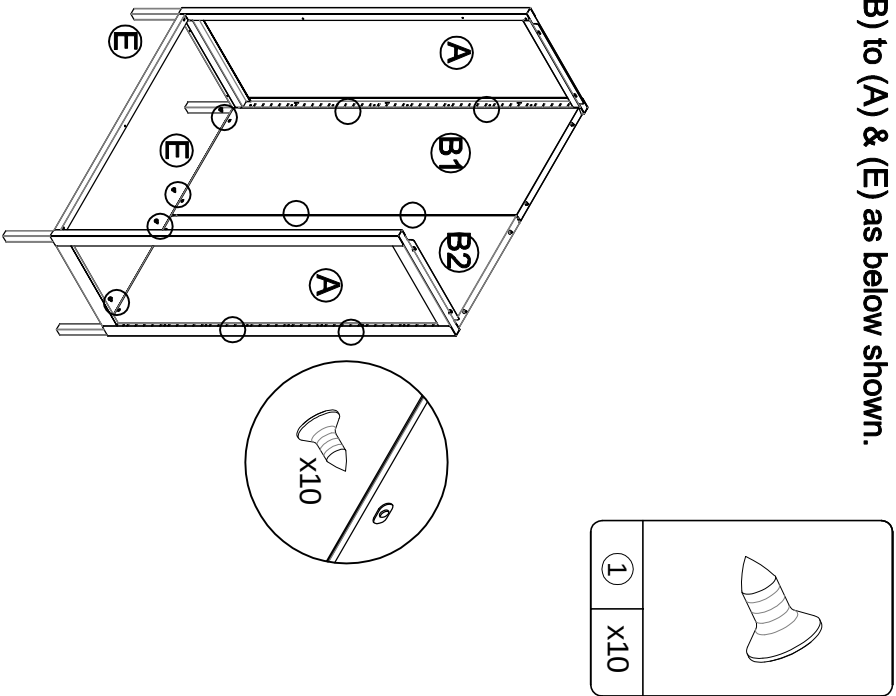



2) - Attach 6 to (E) as below shown.

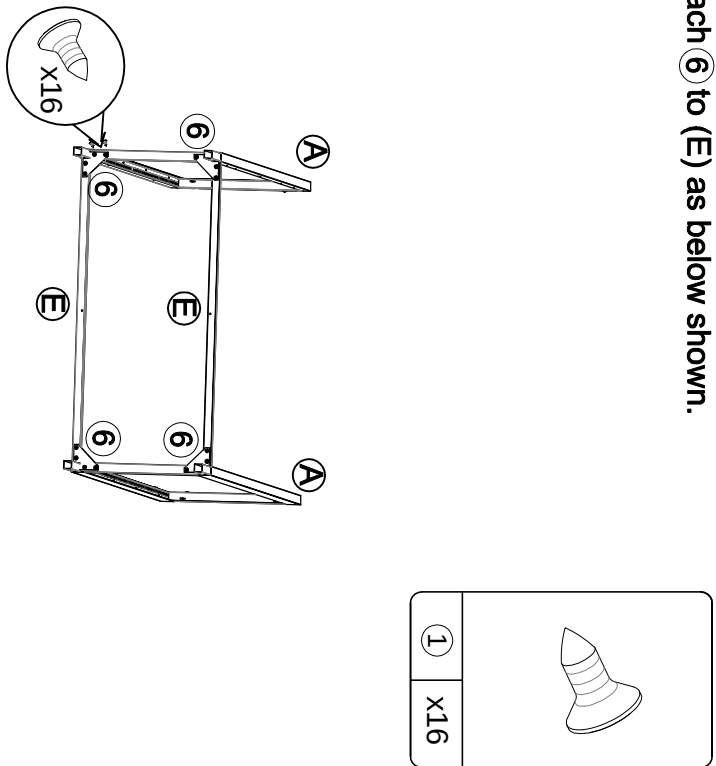



4) - Attach (F) to (A) & (B) & (E) as below shown.

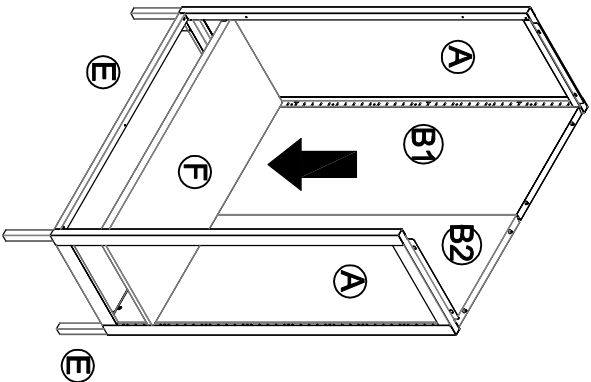


5) - Attach (D) to (A) as below shown.

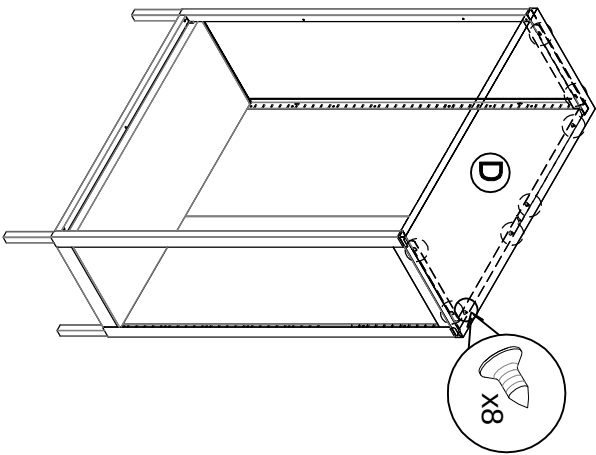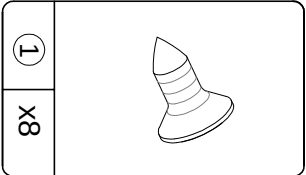





6) - Attach (G) to pre-assembled unit as below shown.

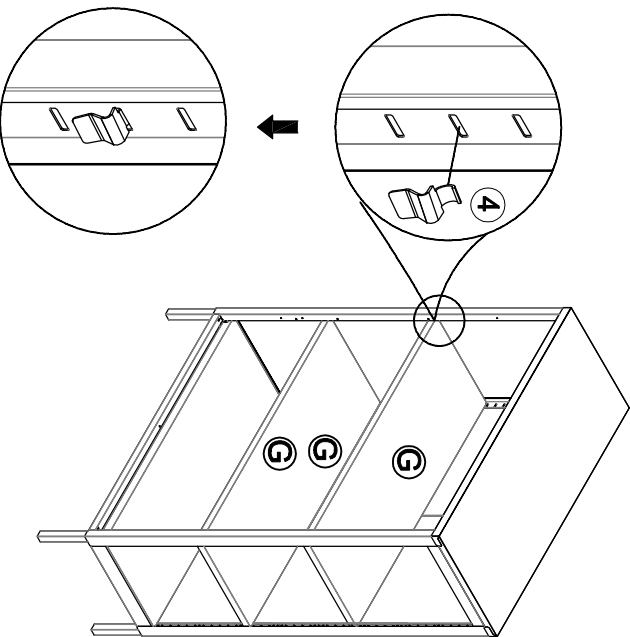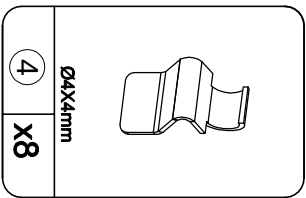




8) - Attach (C) to pre-assembled unit as below shown.

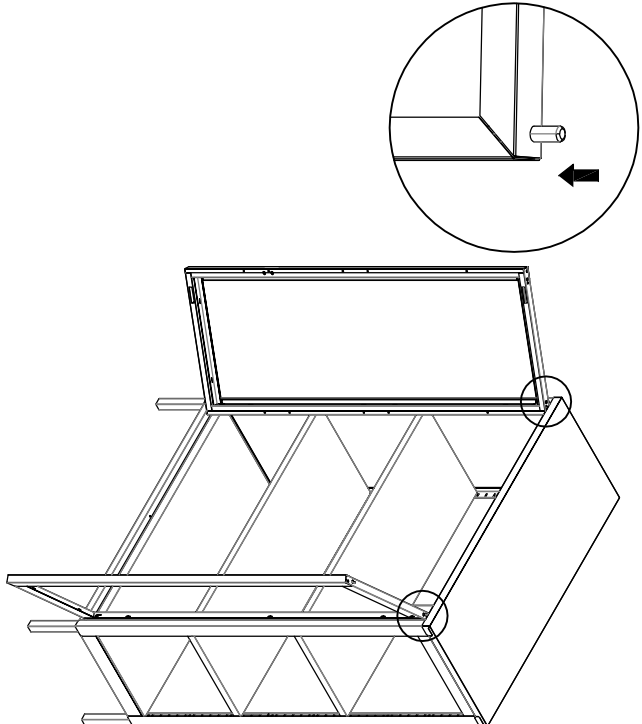




9) - Attach (5) to (C) as below shown.

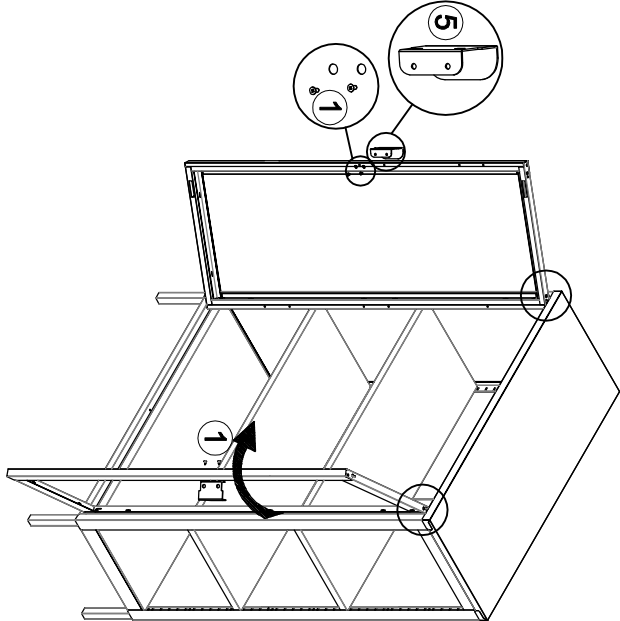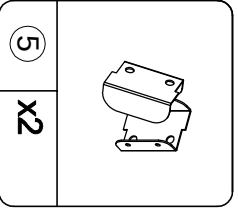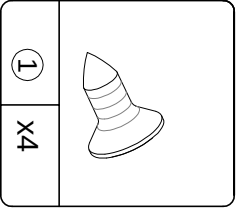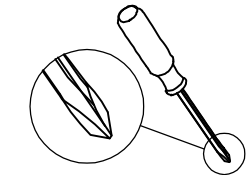

7) -Attach (2) & (3) to pre-assembled unit as below shown.

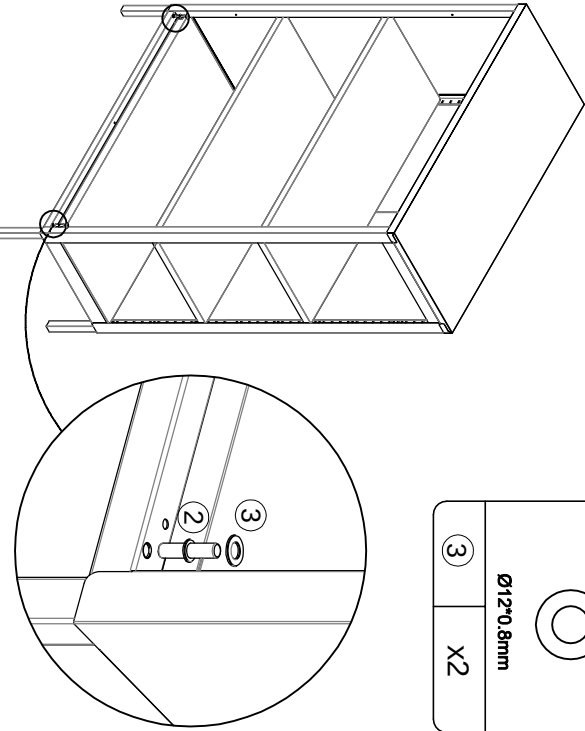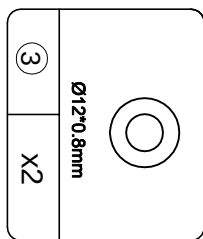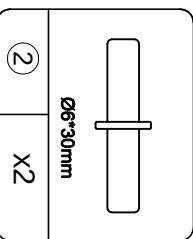

10)

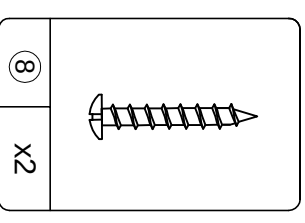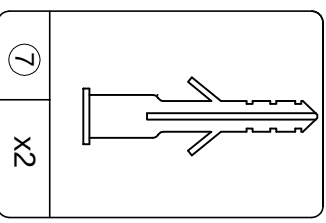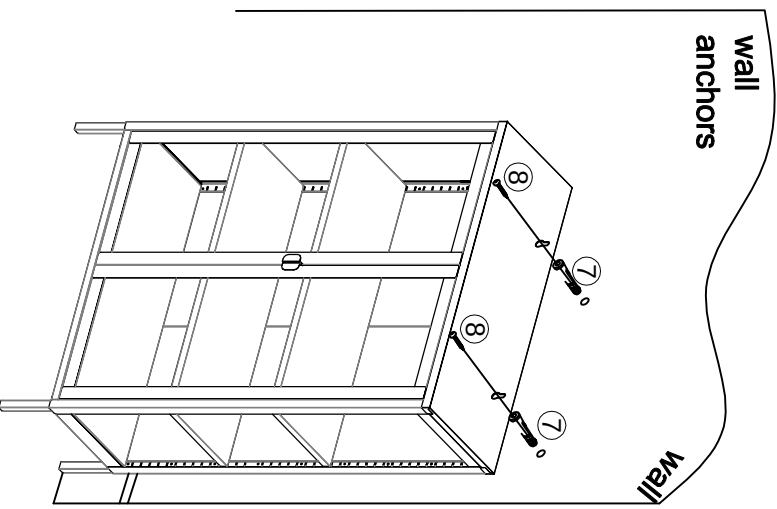

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.