

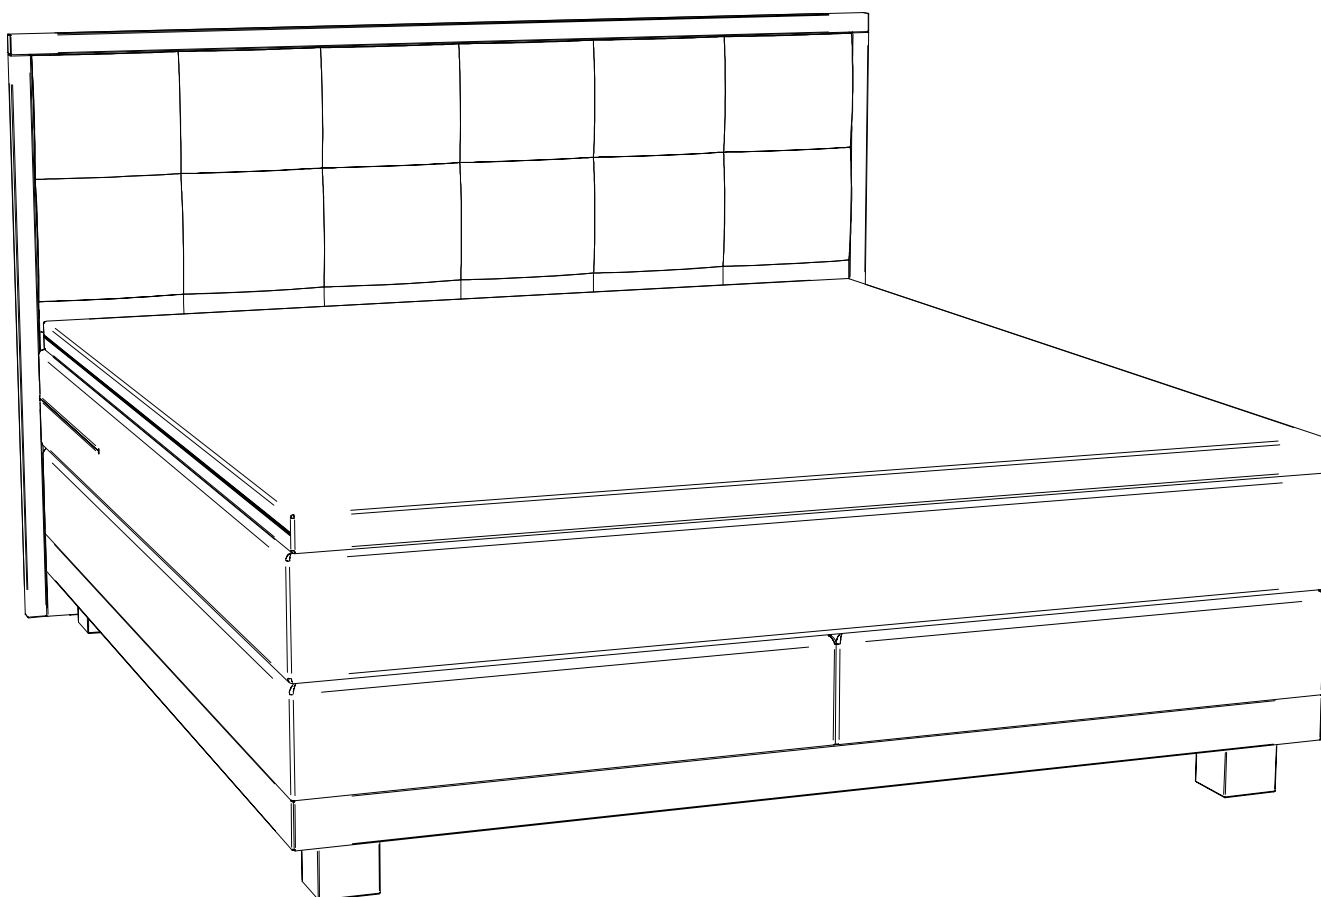
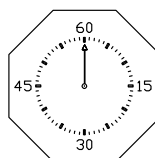




Chalet

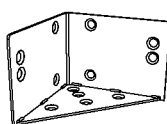


Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari




A x2 	B x2 	C x4  630.101	D x16 M8 x20  631.872
---	---	--	--

1.

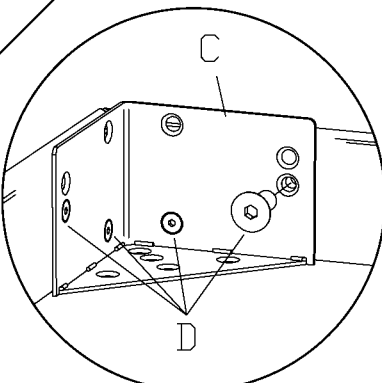

C


D

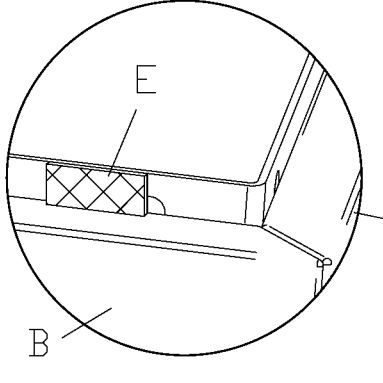

E


B

E x4




630.50501

Z x1



631.101

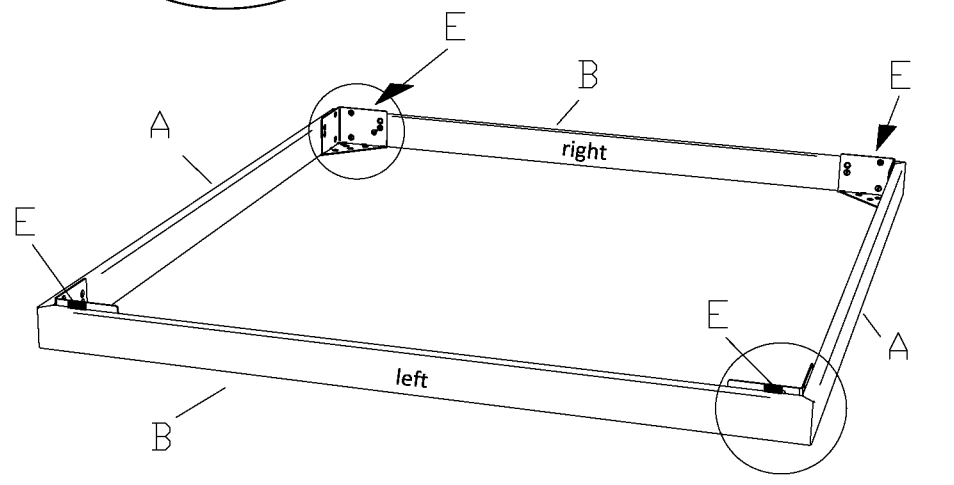

A


B

right


left

E

F x4




D x4
M8 x20




631.872

2.

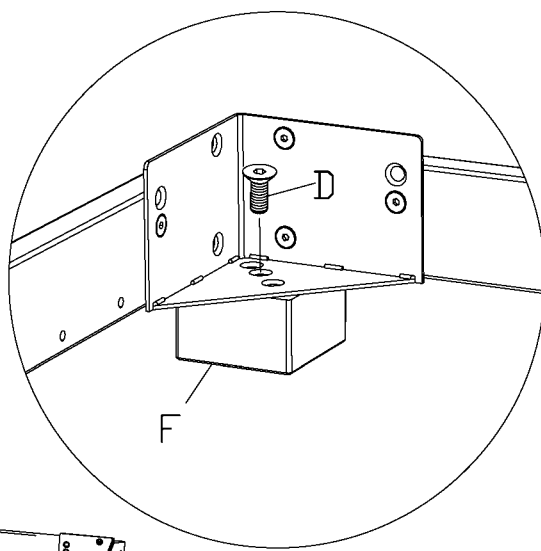

F


D

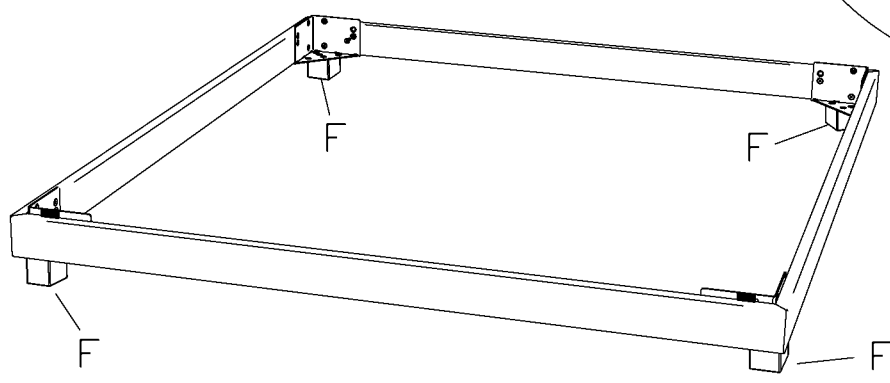

F

bei Breite 140cm
for width 140cm
pour la largeur 140cm
per misura 140cm

G x1

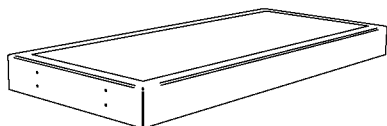

H x2





793.305

M x2




793.305

3a

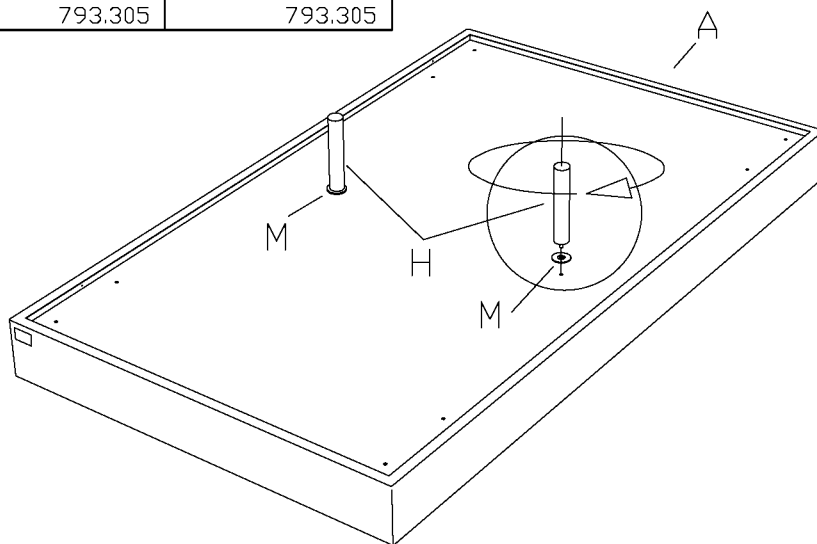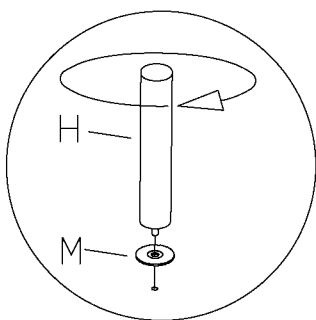

bei Breiten 140-200cm
for widths 140-200cm
pour la largeur 140-200cm
per misura 140-200cm

G x2

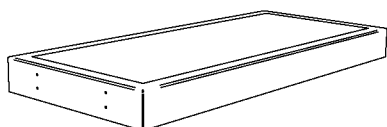


H x6




793.305

J x1




630.779

K x1

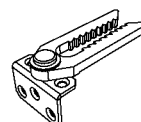


630.779

L x6



631.303

3b

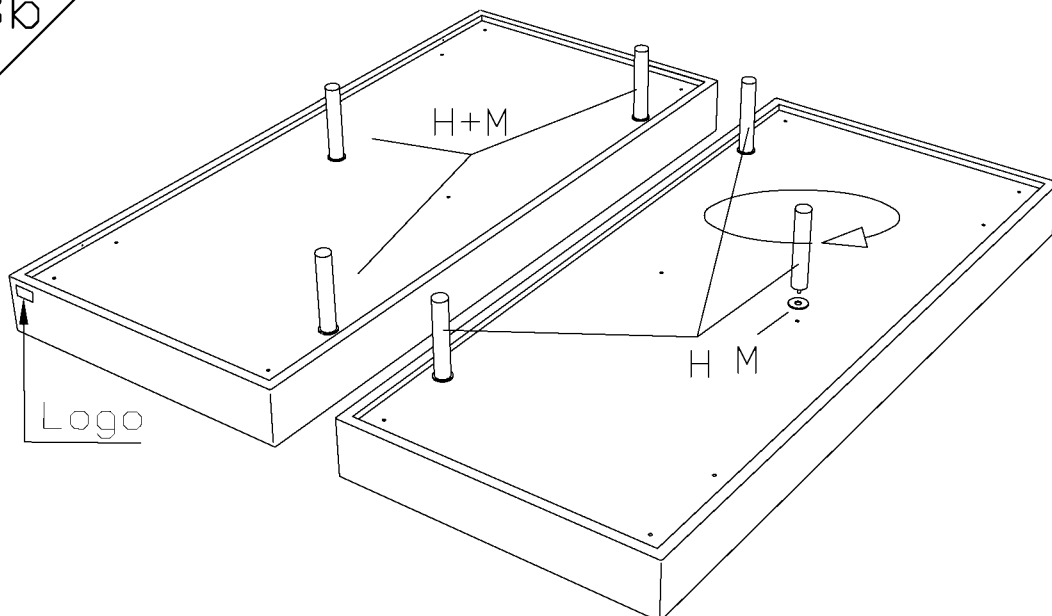


M x6




793.305

660.01203

4.

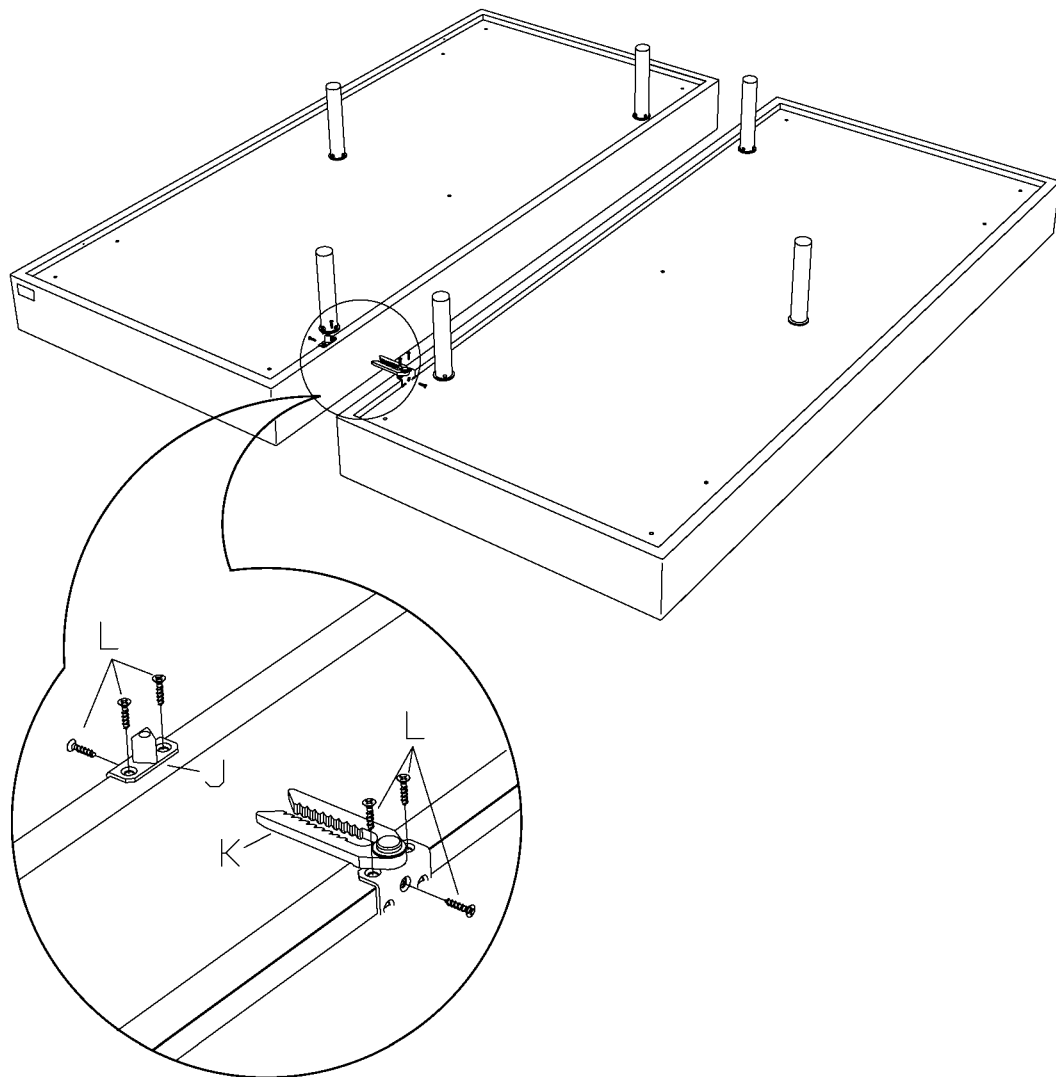

5.

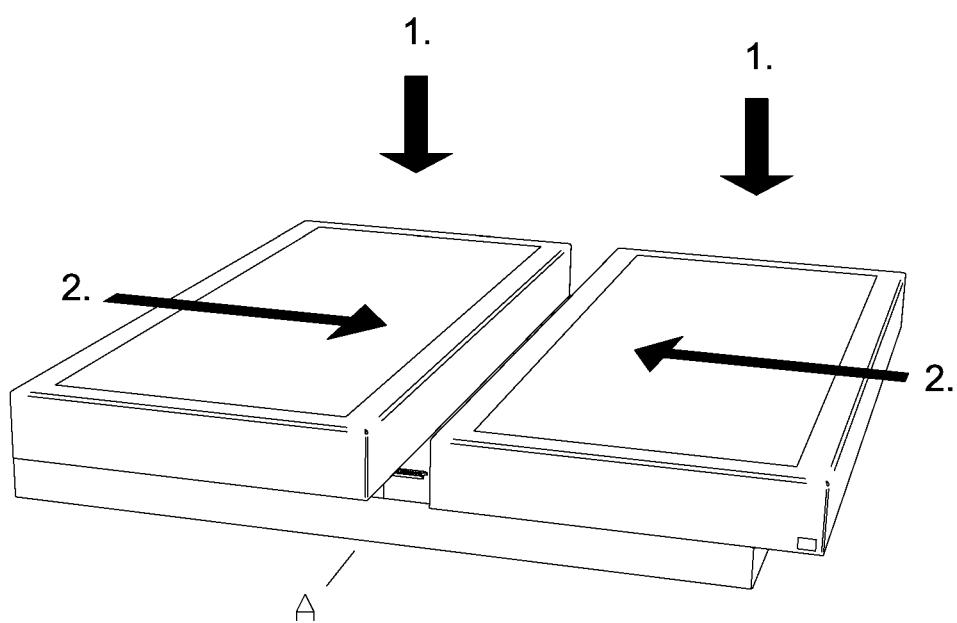

N x1		□ x1		P x1		Q x9	 631.87700
------	--	------	--	------	--	------	---------------

6.

Diagram illustrating the assembly of the front and back panels (N) using square spacers (□) and screws (Q). The screws are shown being inserted into the pre-drilled holes in the panels.

7.

Diagram illustrating the assembly of the top panel (P) onto the frame. The top panel is shown being placed on top of the frame, and the spacers (□) and pins (R) are used to secure it.

660.01203

1 sektorig / 1 sector / 1 secteur / 1 settore

S x4




631.887

T x4






631.012

Z x1





631.100

8.

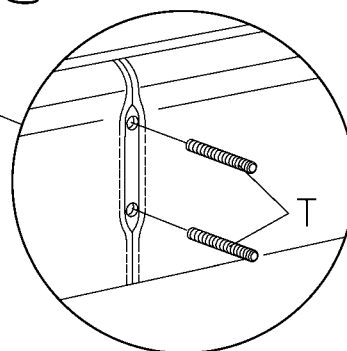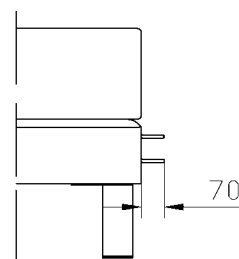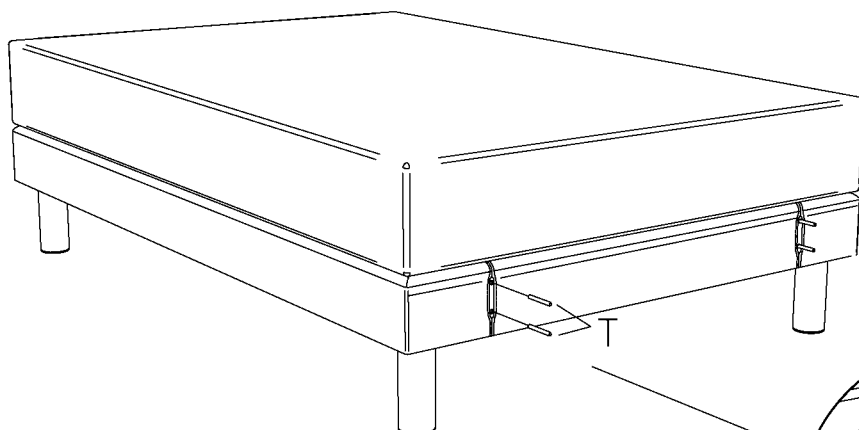

9.

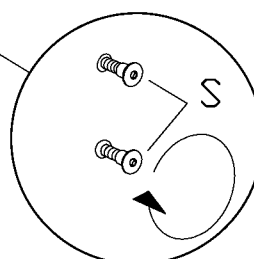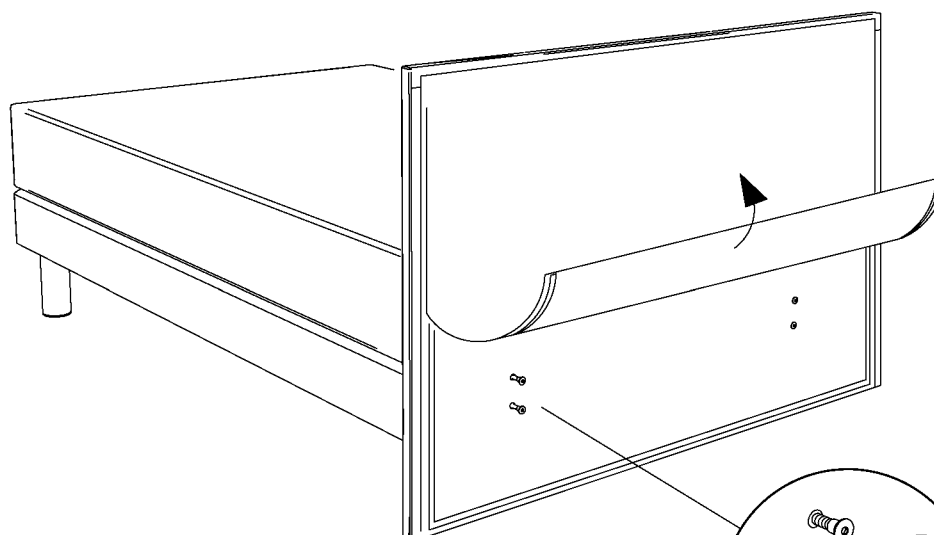

2 sektorig / 2 sector / 2 secteur / 2 settore

S x8




631.887

T x8






631.012

Z x1



631.100

8.

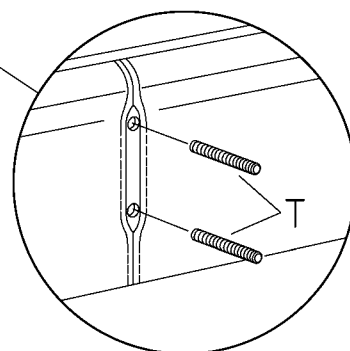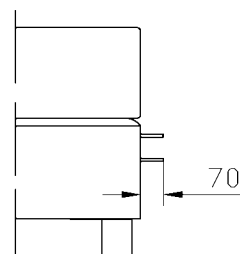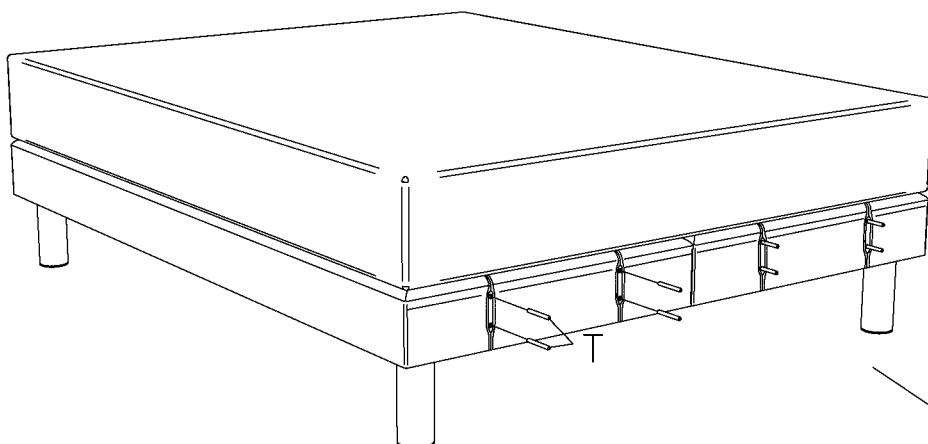

9.

